

Part number:

HYDROMA

HYDRAULICKÉ SYSTÉMY

**HIDROMA
SYSTEMS**

UKŁADY HYDRAULICZNE

HYDROMA

ГИДРАВЛИЧЕСКИЕ СИСТЕМЫ



HYDRAULIC COMPONENTS
HYDROSTATIC TRANSMISSIONS
GEARBOXES - ACCESSORIES

Via M. L. King, 6 - 41122 MODENA (ITALY)

Tel: +39 059 415 711

Fax: +39 059 415 729 / 059 415 730

INTERNET: <http://www.hansatmp.it>

E-MAIL: hansatmp@hansatmp.it

HT 16 / M / 111 / 1010 / E

MANUFACTURING
THE PRODUCTION LINE OF HANSA-TMP

Variable Displacement Closed Loop System Axial Piston Pump

TPV 1000




CONTENTS

General Information	4
Installation Instructions	5
Technical Specifications	6 - 7
Single Pump Installation Drawing	8 - 9
Tandem Pump Installation Drawing	10 -11
Triple Pump Installation Drawing	12
Single Pump without Charge Pump	13
Mounting Flanges and Shaft	14 - 15
Rear Pump Mounting Flanges	16 - 19
Control Devices	20 - 26
Optional	27 - 30
Available Configurations	31
Order Code	32 - 33
Accessories	34


GENERAL INFORMATION

TPV modes are variable displacement axial piston pumps, with swashplate system, for closed loop hydrostatic transmissions.

Direct Mechanical Control

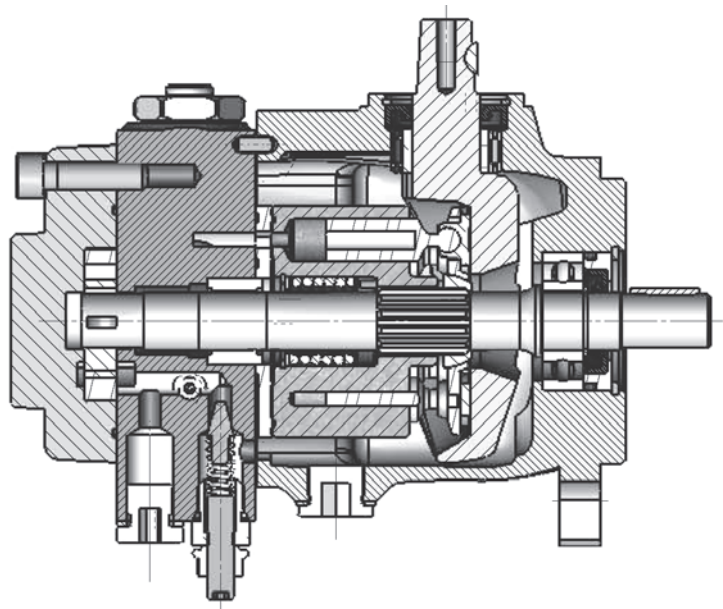

Hydraulic Remote Control

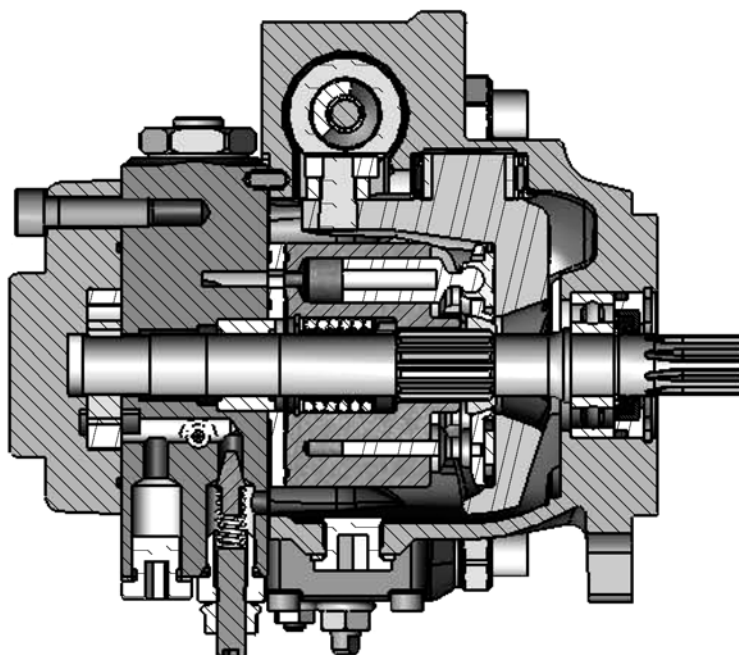

Features

- Silent running
- High rotation speed
- Compact design
- Suitable for multiple pump assembly
- Easy maintenance
- Built-in pressure relief valves
- Optionals: screw-type or electric by-pass-valve, purge valve, adapter flange from SAE-A to SAE-B
- Accessories: auxiliary gearpumps, hydraulic and electric remote control valves, mounting kit for diesel and petrol engines

All HANSA-TMP's TPV pumps are tested dynamically and statically to ensure the quality of our products.

INSTALLATION INSTRUCTIONS

- During the assembly, check that pump is in line and concentric with the driveshaft sleeve to prevent overloading of the pump shaft bearing.
- Clean carefully all tanks and pipes internally before assembly.
- The pipe internal diameter must be suitable for the max oil speed through them.
- It is advisable to fit the pump lower than oil level of tank.
- Heat exchangers must be considered in the machine design, to keep temperature level within the limit of 80°C.

Multiple Pumps

- In case of installing multiple pump it is advisable to mount a supplementary support (see optional SP).

Attention: connect the support to the engine and/or use an elastic support.

Maximum Shaft Torque

In the case of installation of multiple pump, verify that the total shaft torque is not more than the maximum value rated for each shaft type.

Optional

The TPV pumps can be supplied in different versions, with different types of shaft and equipped with different types of control devices and optionals:

- Direct mechanical control lever	DM
- Spring zero return	DMS
- Detent on zero position	LCS1
- Hand wheel control	LCS2
- Remote hydraulic servo-control	SHI
- Remote electronic servo-control	SEI
- By-pass lever	LB
- Screw By-pass	SB
- Electric By-pass	BEO (normally open)
- Electric By-pass	BEC (normally closed)
- Supplementary support for multiple pumps	SP
- Purge valve	VS
- Adaptors flange from SAE A to SAE B	FB
- Adaptors coupling Z = 9 / Z = 13	ST
- Purge valve + By-pass lever	VSLB

First Starting

- Before starting fill all the system components with new and filtered oil.
- Verify that the charge pressure is correct.
- Restore the tank oil level.

Maintenance

- The first oil change must be made after approximately 500 hours of operations, and then every 2000 hours.
- The filter cartridge must be replaced the first time after 50 hours and then every 500 hours, such time should be reduced when the filter clogging indicator shows that the cartridge is clogged or when the system works in a heavily polluted environment.

TECHNICAL SPECIFICATIONS



Pump Model		TPV 6-7	TPV 8-7	TPV 9-7	TPV 11-7	TPV 12-7	TPV 13-7	TPV 15-9	TPV 17-9	TPV 18-9	TPV 19-9
Max. displacement	cm ³ /n	7,4	8,9	9,6	11,2	12,8	13,6	15,00	17,1	18,2	19,4
Flow rating ⁽¹⁾	lt/min.	25,01	31,96	34,74	40,32	46,08	48,88	54,00	61,77	66,37	69,84
Power rating ⁽¹⁾	kW	8,75	11,18	12,15	14,11	16,12	17,11	18,9	21,61	23,23	24,44
Boost pump displacement	cm ³ /n	3,9 (Rear cover Closed, B1, B2) 4,7 (Rear cover SAE A)									
Rated pressure	bar	210									200
Max. pressure	bar	300	300	300	300	300	300	280	280	270	250
Max. relief valve setting	bar	300									
Standard Boost pressure ⁽²⁾	bar	11 (Mechanical Control) 20 (Hydraulic/Electric Servo Control)									
Suction pressure	bar (absolute)	>= 0,8									
Max.case pressure	bar	1,5									
Min. inlet shaft speed	n/min.	500									
Rated speed	n/min.	3600									2900
Max. speed	n/min.	3900									3200
Max. oil temperature	°C	80									
Oil viscosity	mm ² /sec.	15-35									
Fluid contamination		18/15/12 according to ISO 4406									
Dry weight (single pump) ⁽³⁾	kg	8,8									
Dry weight (tandem pump) ⁽³⁾	kg	19,5									


(1) 3600 n/min. 210 bar

(2) 1500 n/min.

(3) Indicative values, weight varies depending on configuration and optionals



PERFORMANCE (Indicative Data)

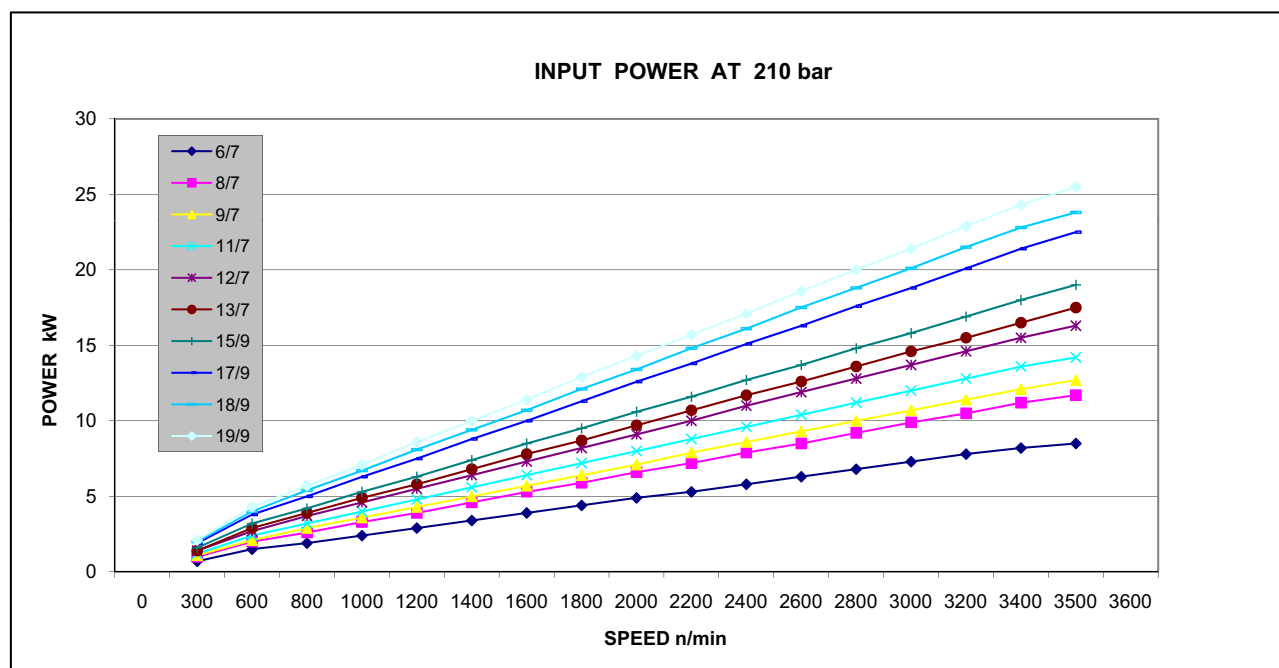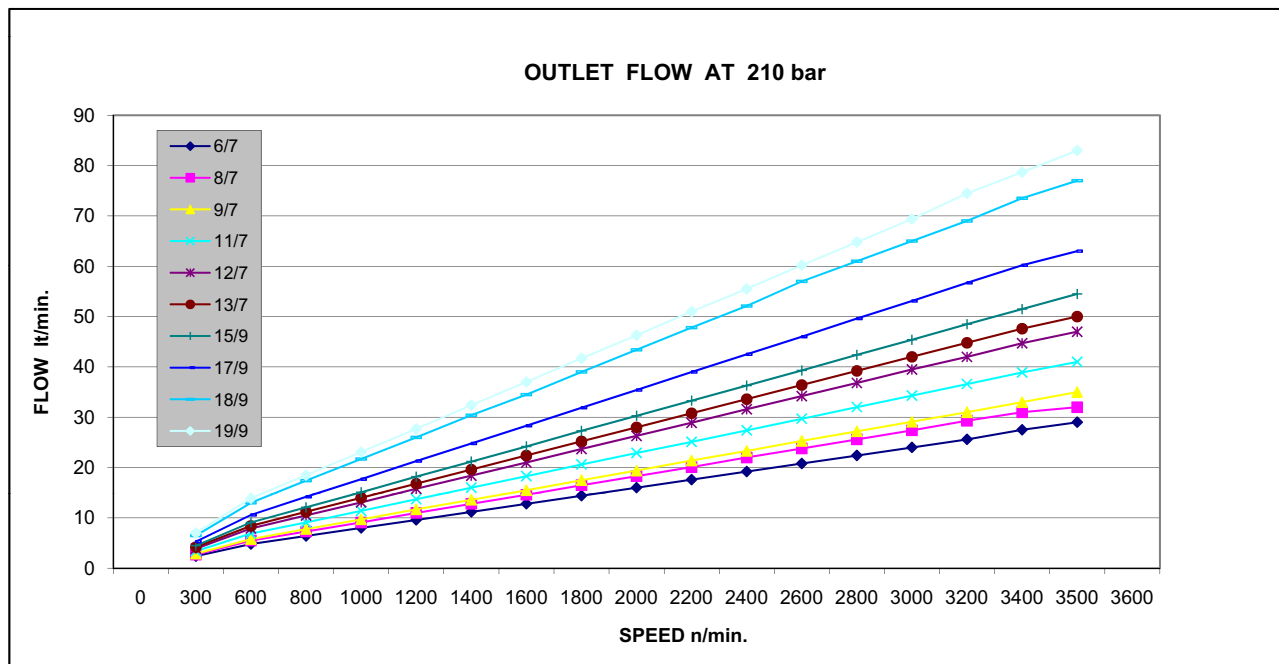

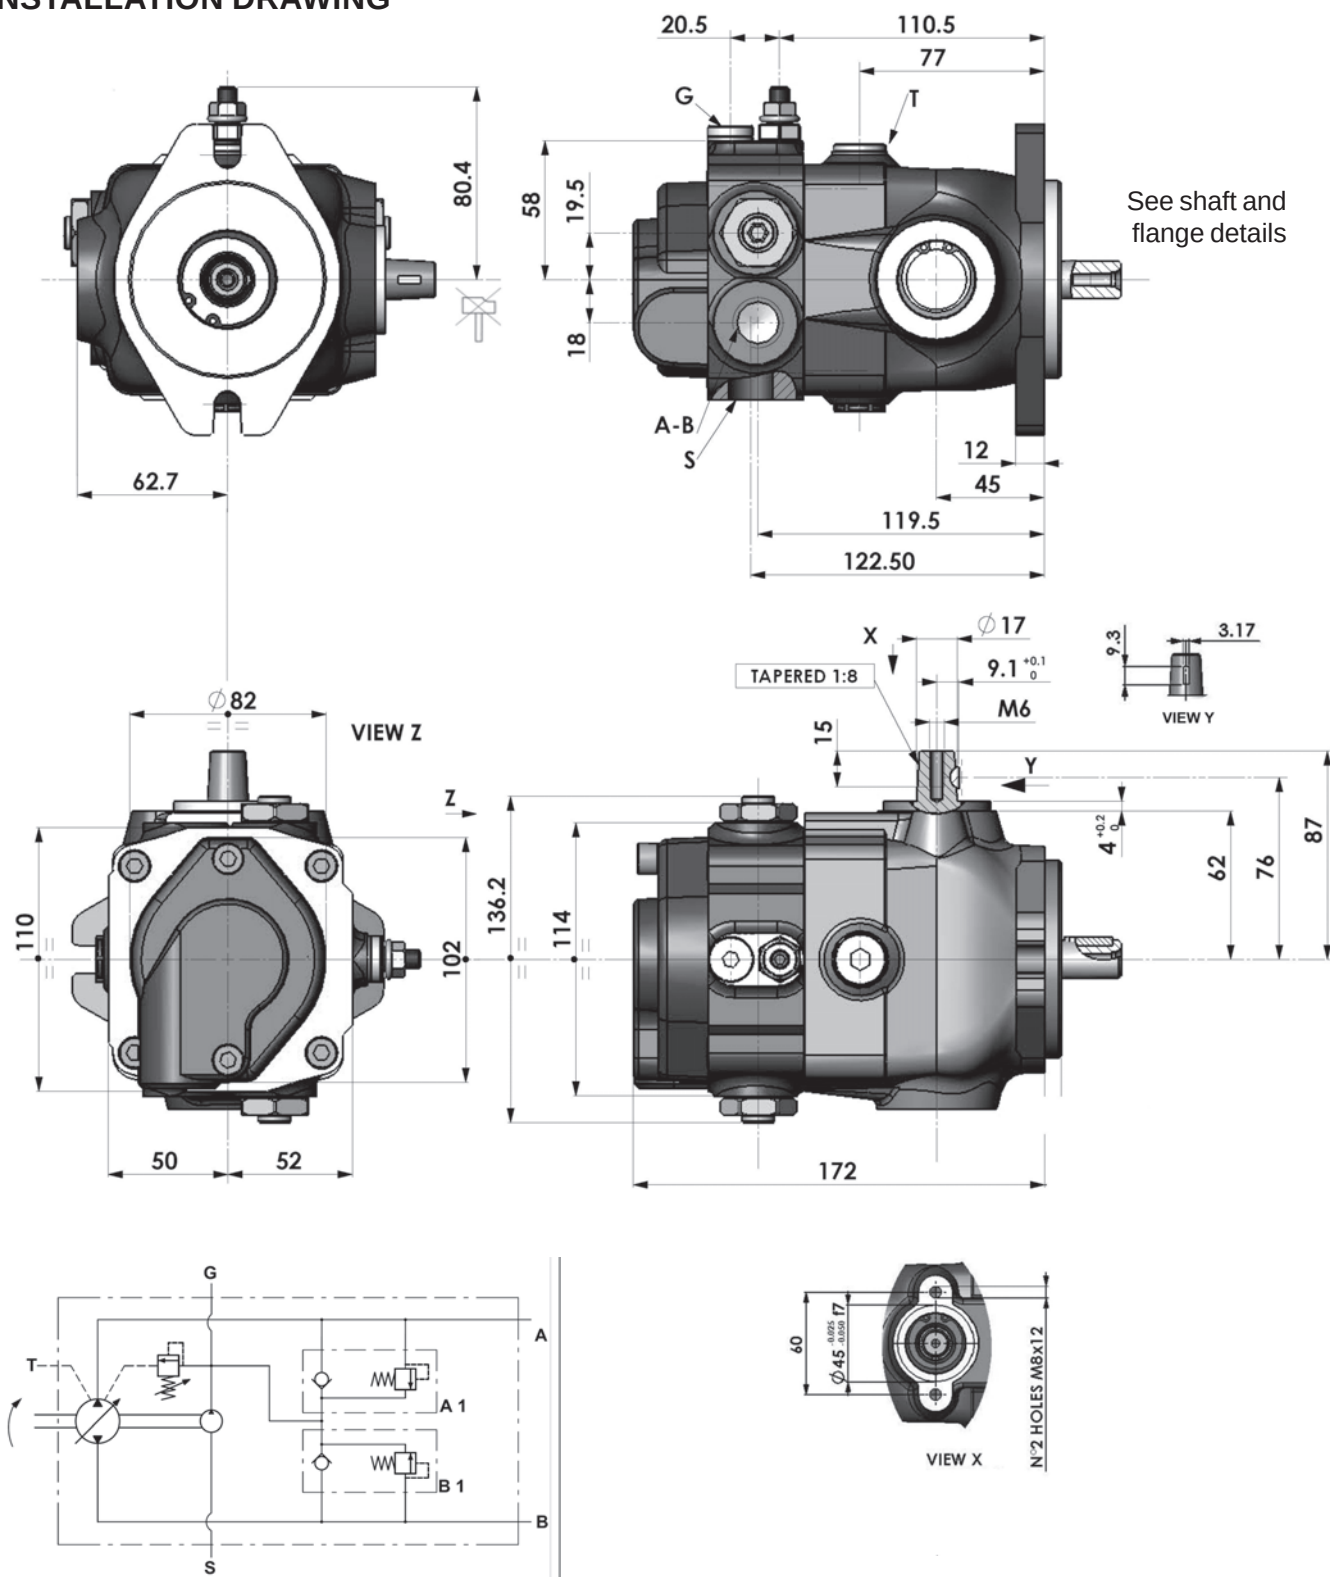
**SINGLE PUMP - Direct Mechanical Control
INSTALLATION DRAWING**


Hydraulic Diagram


Pipe connection		
A - B	Main ports	1/2" BSP
T	Drain	3/8" BSP
S	Suction	1/2" BSP
G	Charge system	1/4" BSP

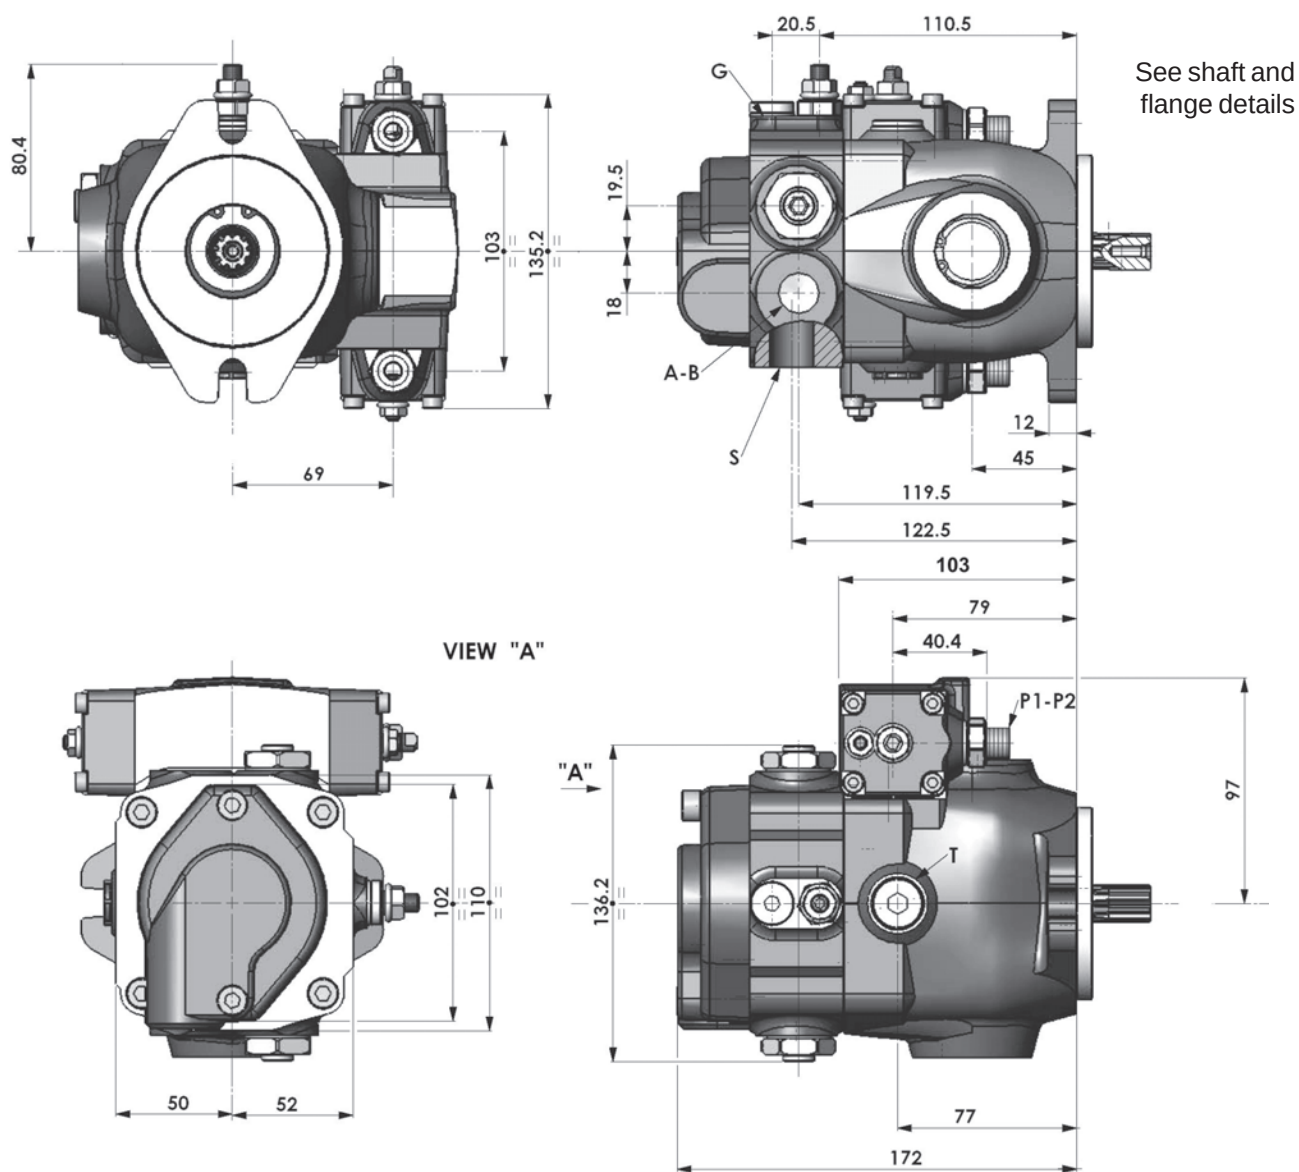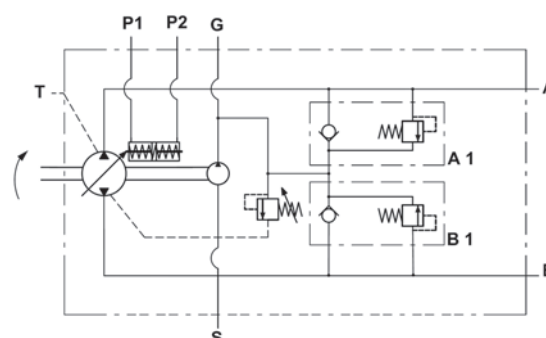**SINGLE PUMP - Hydraulic Remote Servo Control
INSTALLATION DRAWING**

Hydraulic Diagram

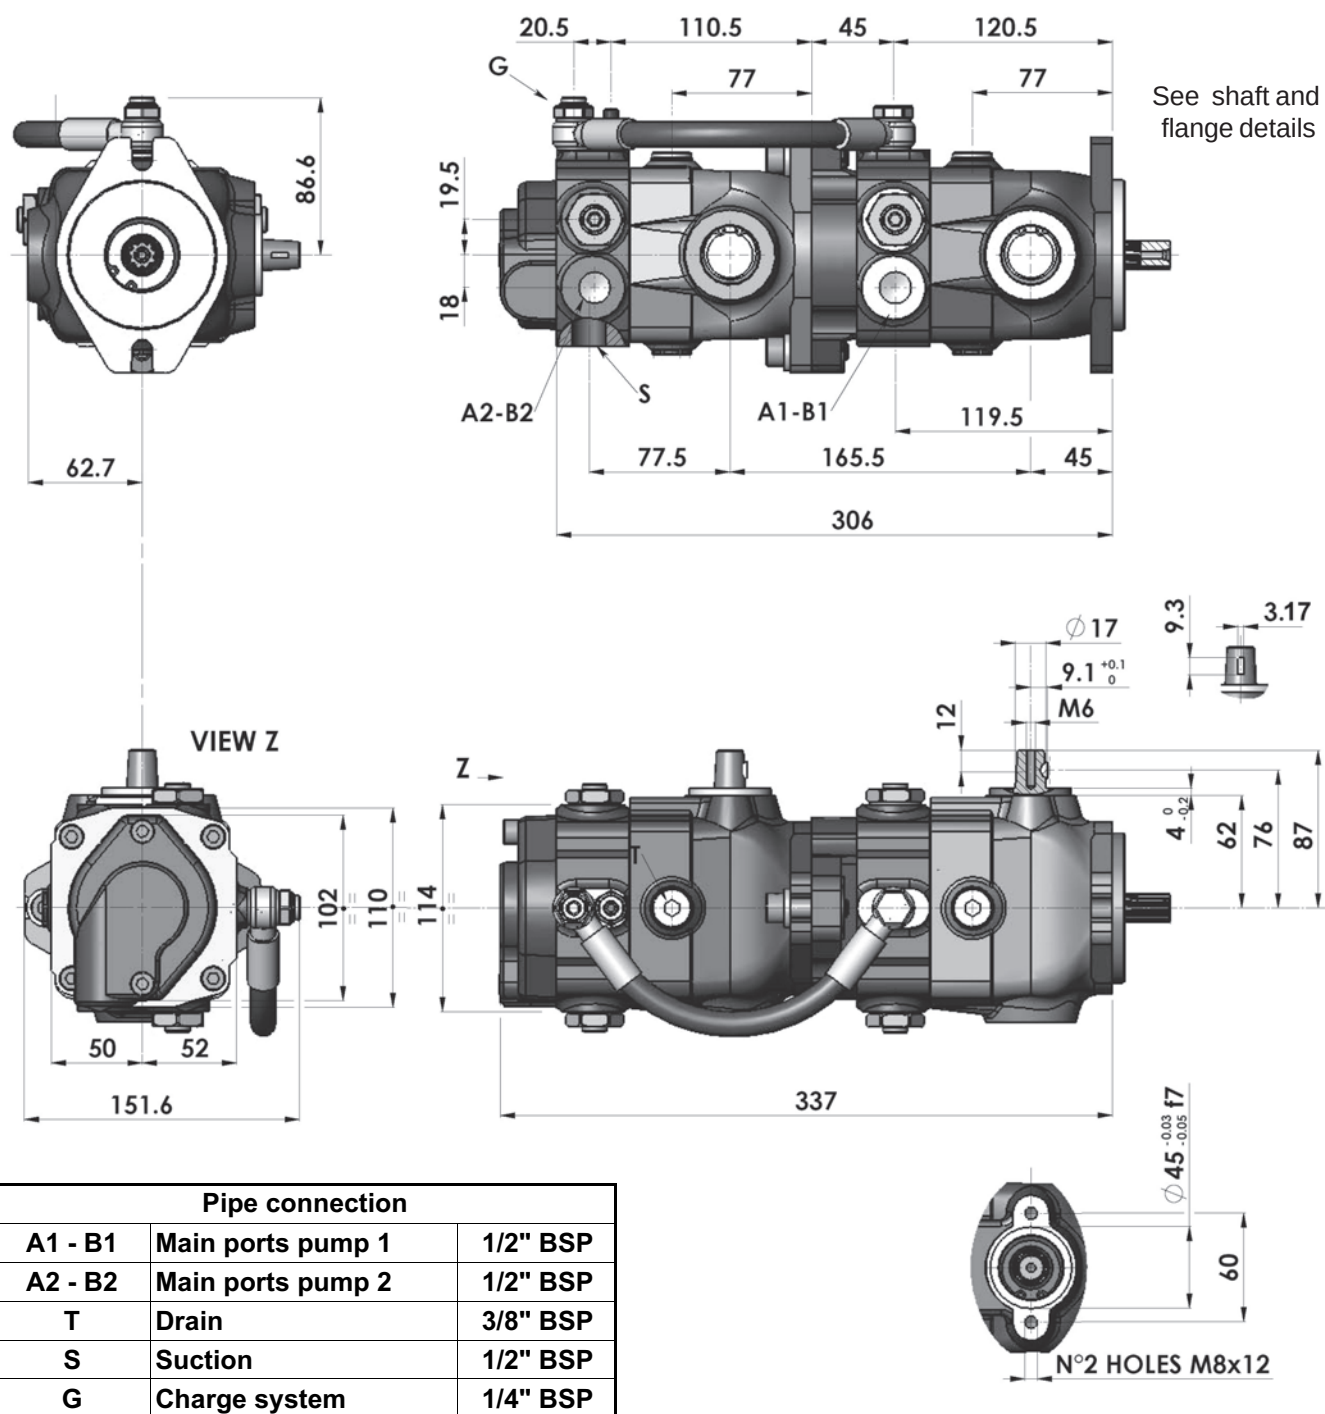
Pipe connection		
A - B	Main ports	1/2" BSP
T	Drain	3/8" BSP
S	Suction	1/2" BSP
G	Charge system	1/4" BSP
P1 - P2	Servo-control ports	1/4" BSP


**TANDEM PUMP - Direct Mechanical Control
INSTALLATION DRAWING**

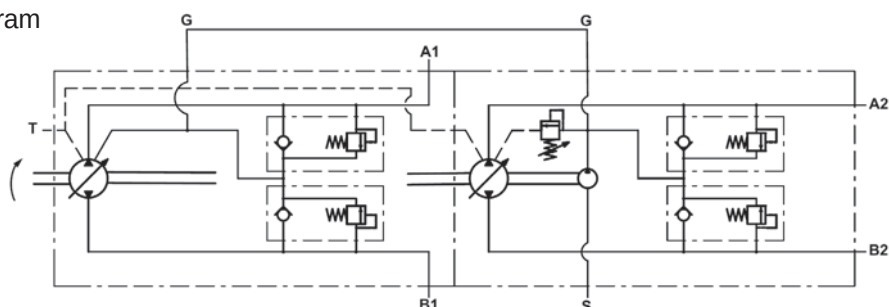
Hydraulic Diagram




**TANDEM PUMP - Hydraulic Remote Servo Control
INSTALLATION DRAWING**


See shaft and
flange details

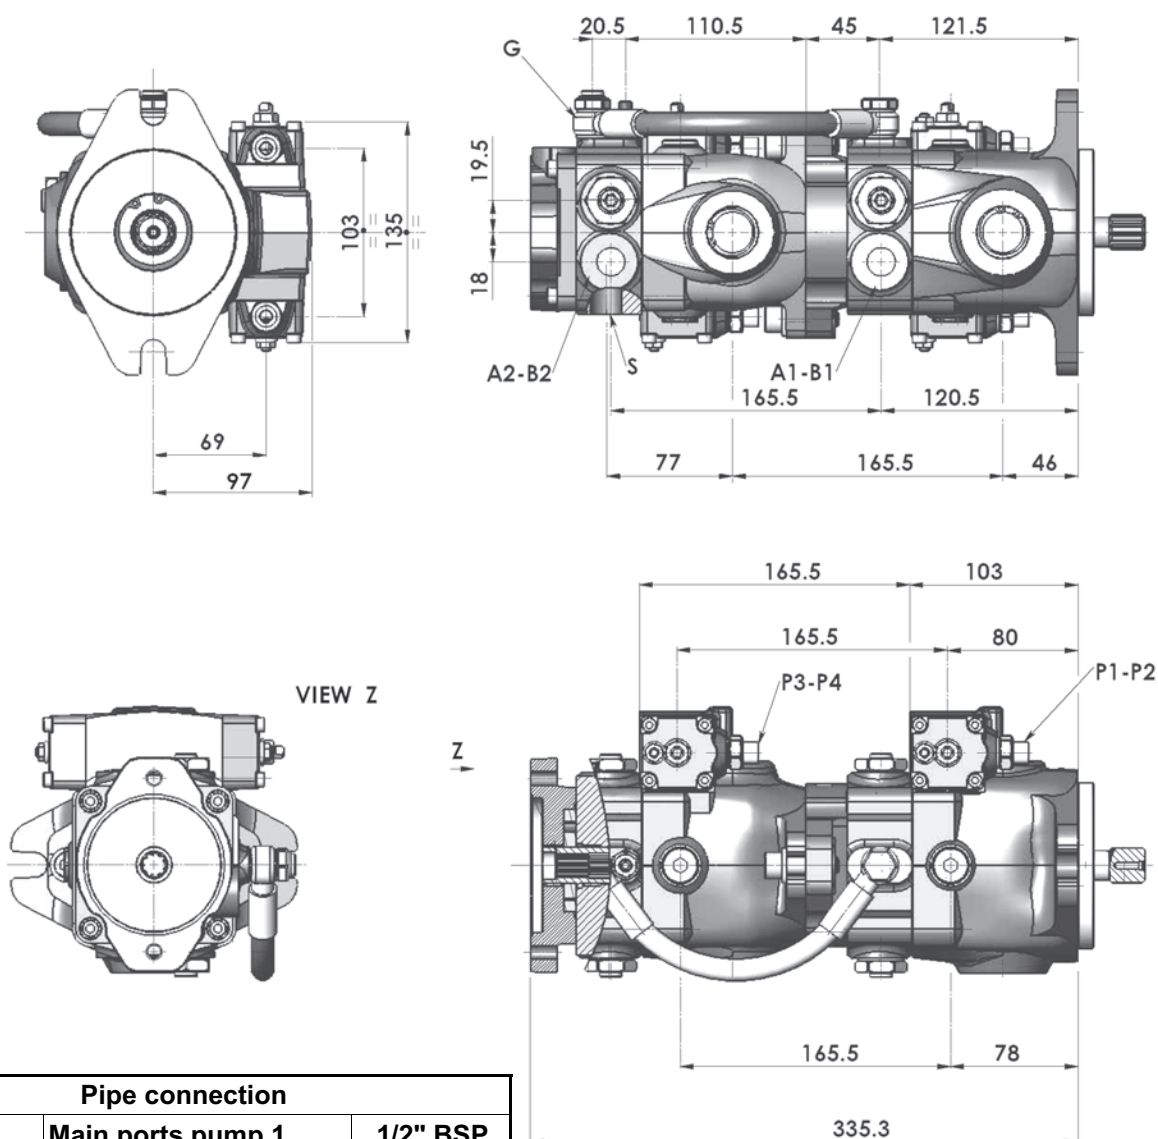

Pipe connection		
A1 - B1	Main ports pump 1	1/2" BSP
A2 - B2	Main ports pump 2	1/2" BSP
T	Drain	3/8" BSP
S	Suction	1/2" BSP
G	Charge system	1/4" BSP
P1-P2-P3-P4	Servocontrol port	1/4" BSP


Hydraulic Diagram

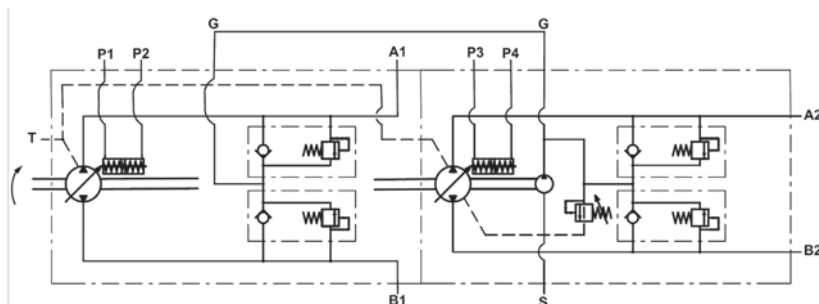

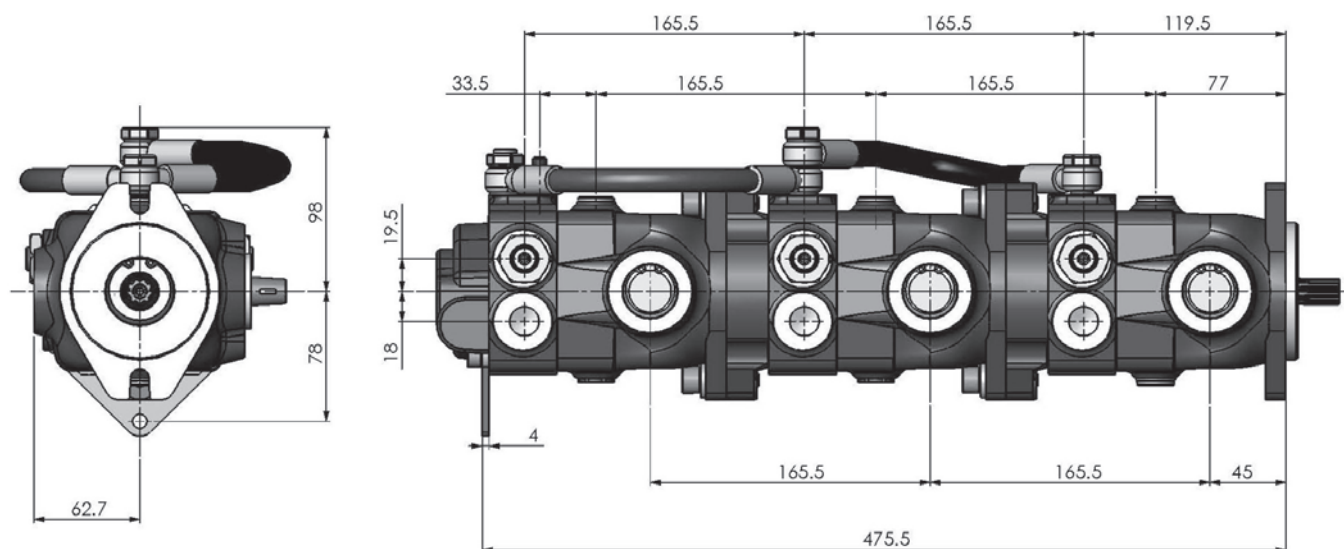**TRIPLE PUMP - Direct Mechanical Control
INSTALLATION DRAWING**


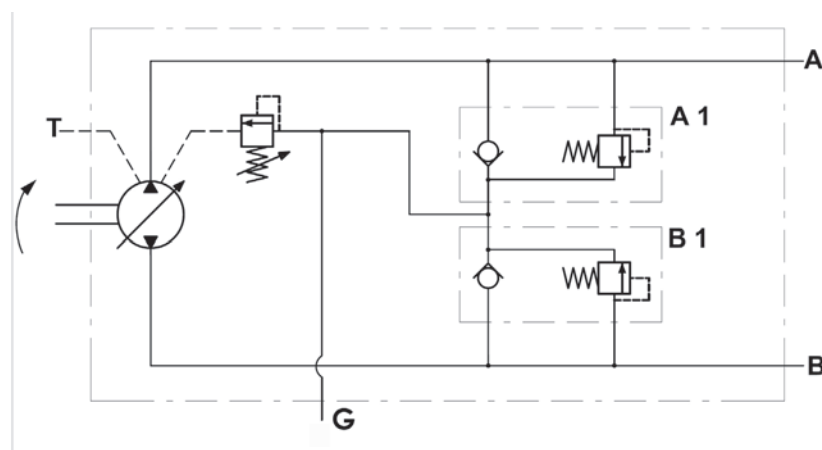
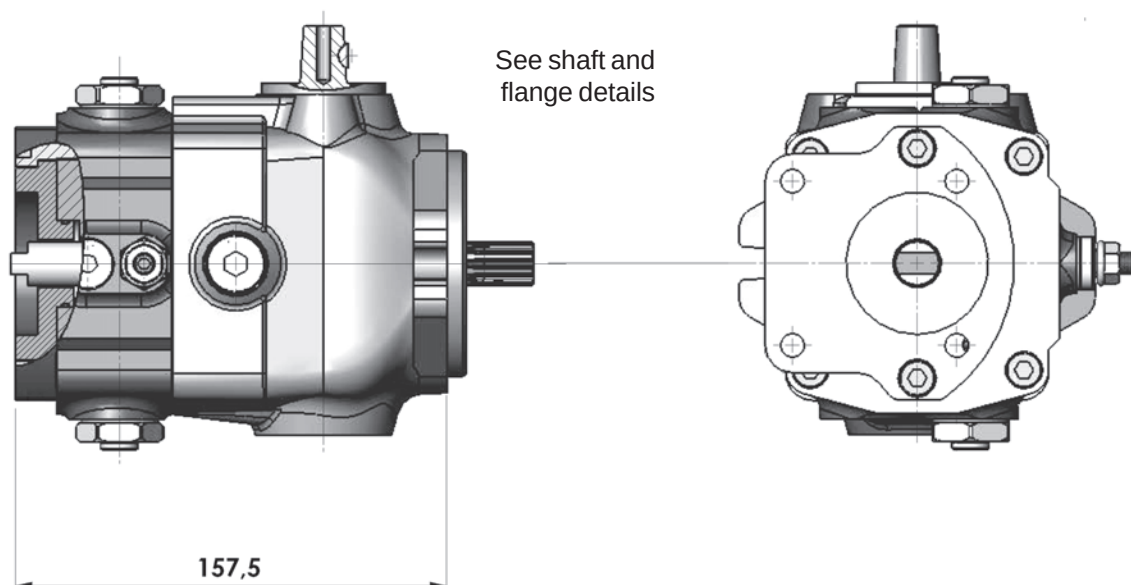
See shaft and
flange details

Pipe connection		
A1 - B1	Main ports pump 1	1/2" BSP
A2 - B2	Main ports pump 2	1/2" BSP
A3 - B3	Main ports pump 3	1/2" BSP
T	Drain	3/8" BSP
S	Suction	1/2" BSP
G	Charge system	1/4" BSP

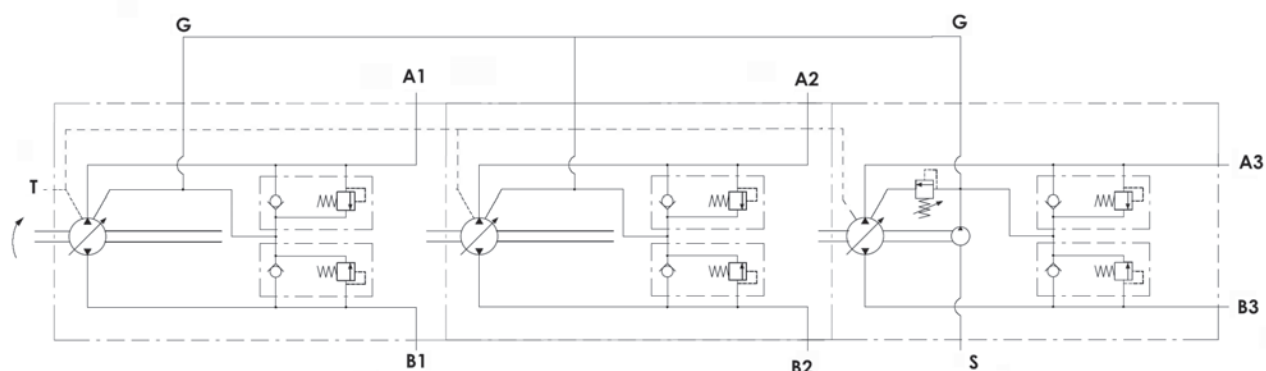

Hydraulic Diagram


**SINGLE PUMP - Direct Mechanical Control without Charge Pump
INSTALLATION DRAWING**




Hydraulic Diagram

Mounting Flange and Shaft Options - FLANGES

SAE A - 2 holes flange **F1**

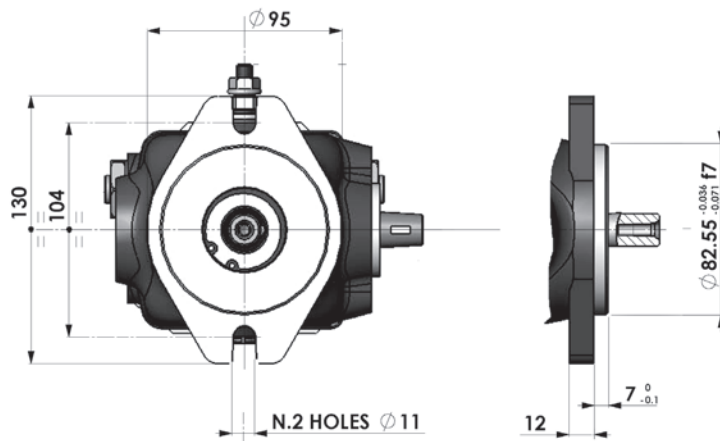


SAE B - 2 holes flange **F2** (only for SHI and SEI 1-2)

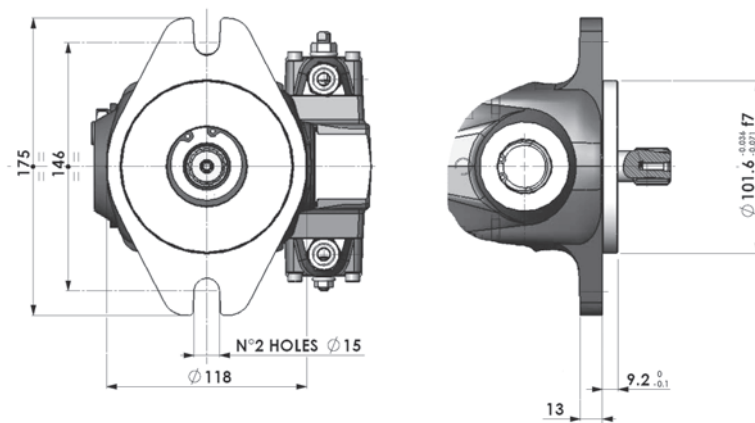

OPTIONAL

Adaptor flange from SAE A to SAE B **FB**


Adaptor coupling Z=9 / Z=13 **ST**

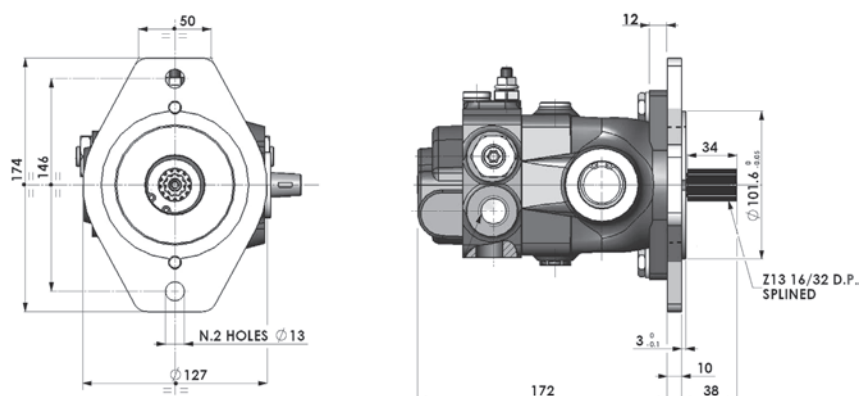


Mounting Flange and Shaft Options - SHAFT

Parallel keyed shaft 15,875 mm. diam. **PS1**


Max. torque = 65 Nm

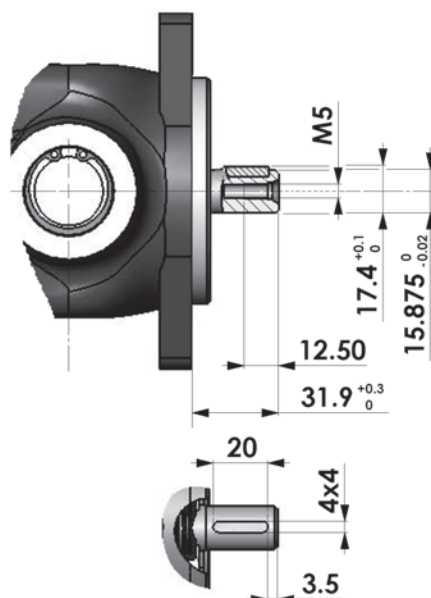Parallel keyed shaft 18 mm. diam. **PS3**


Max. torque = 85 Nm

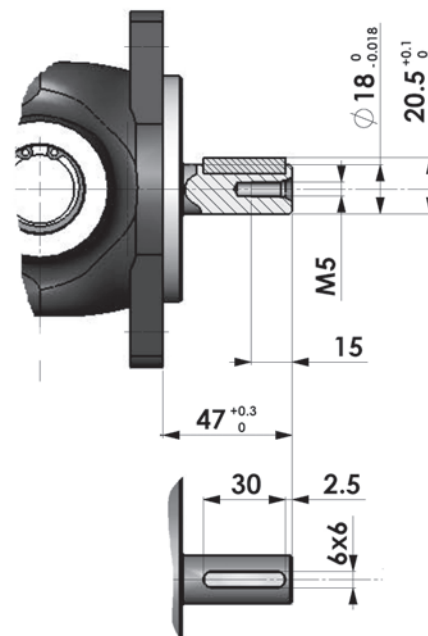Splined shaft Z = 9 **SS2**

Max. torque = 80 Nm

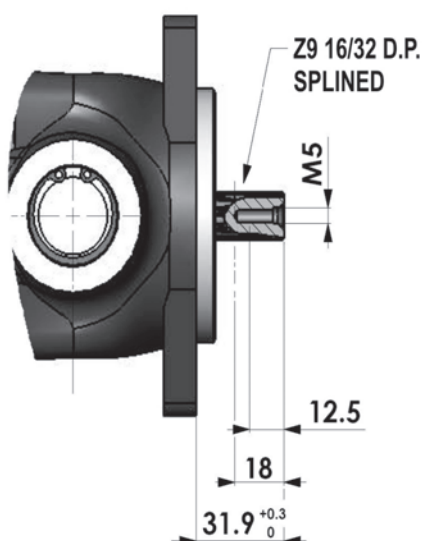Splined shaft Z = 13 **SS3** (only for SHI, SEI 1-2 and F2)

Max. torque = 320 Nm

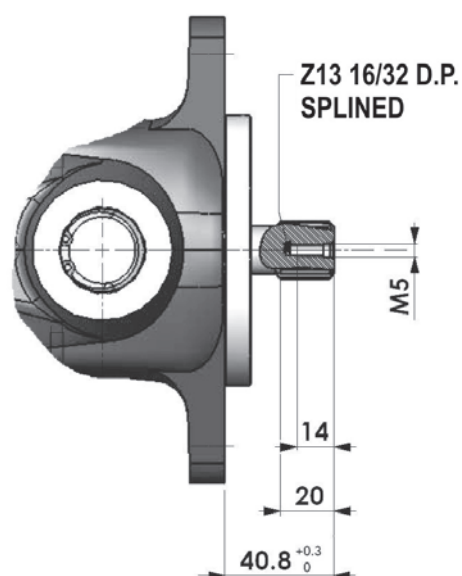


Attention: for the application of multiple pumps the total absorbed torque must not exceed the indicated value

Rear Pump Flange Connections (Pump with Direct Mechanical Control)


B1 - German Standard

Max. torque = 48 Nm

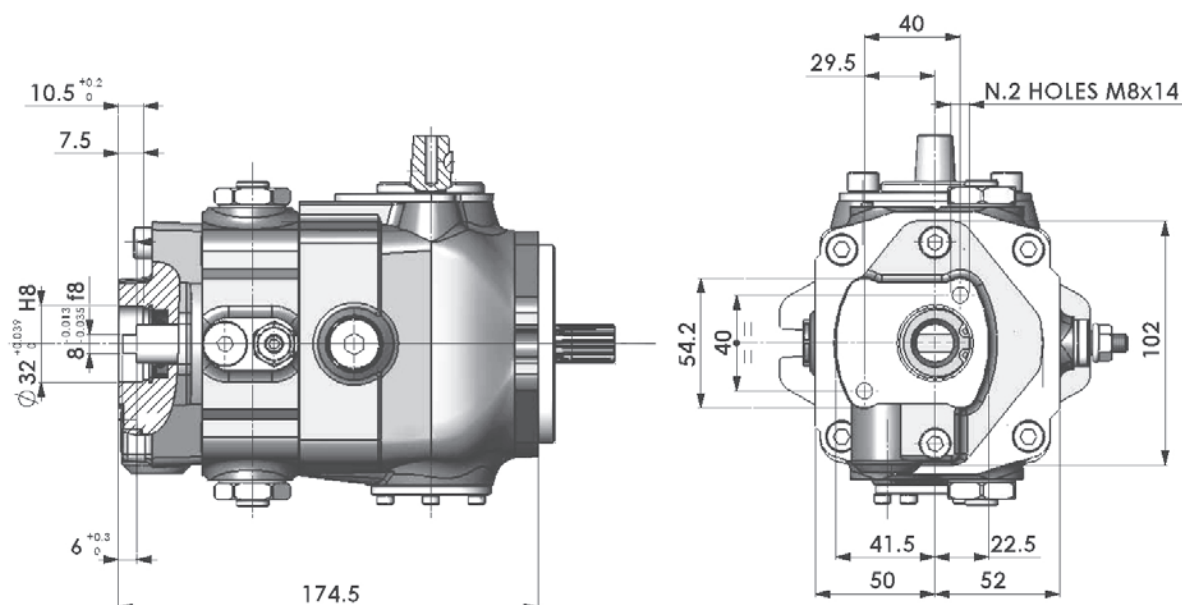

B1-Z9 - German Standard with 9 teeth shaft



Max. torque = 60 Nm

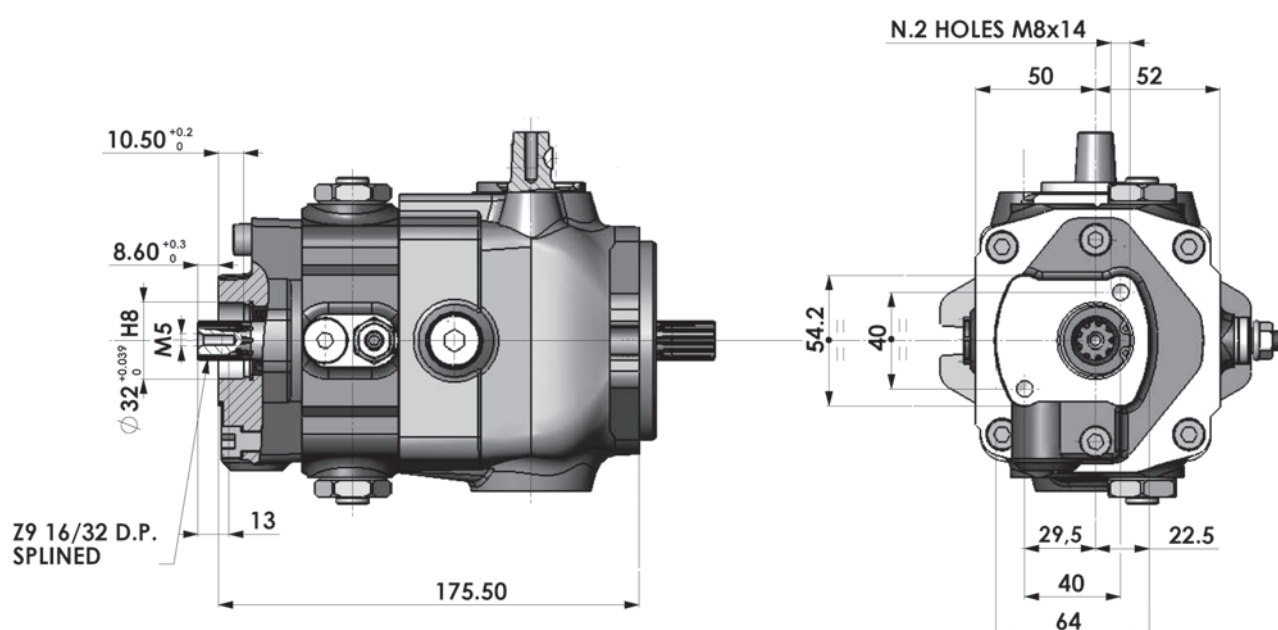



Rear Pump Flange Connections (Pump with Direct Mechanical Control)

B2 - German Standard

Max. torque = 52 Nm

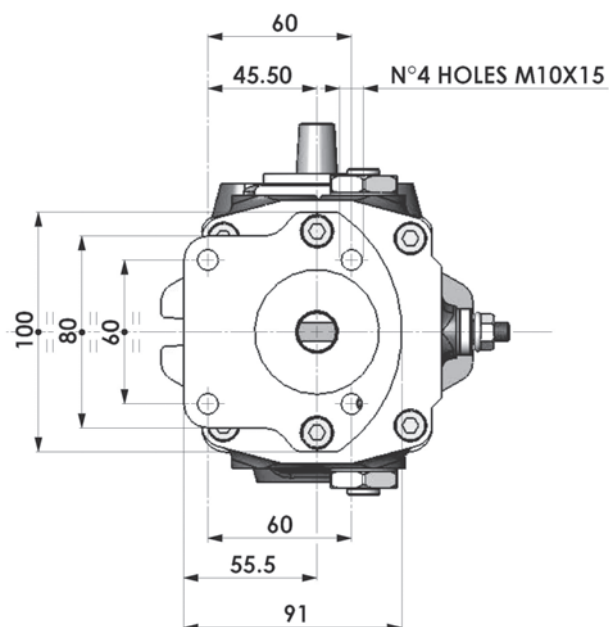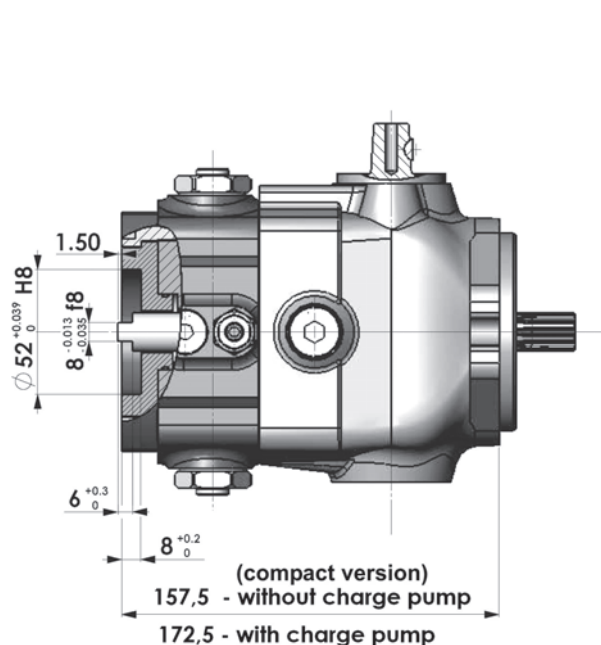**B2-Z9** - German Standard with 9 teeth shaft


Max. torque = 60 Nm

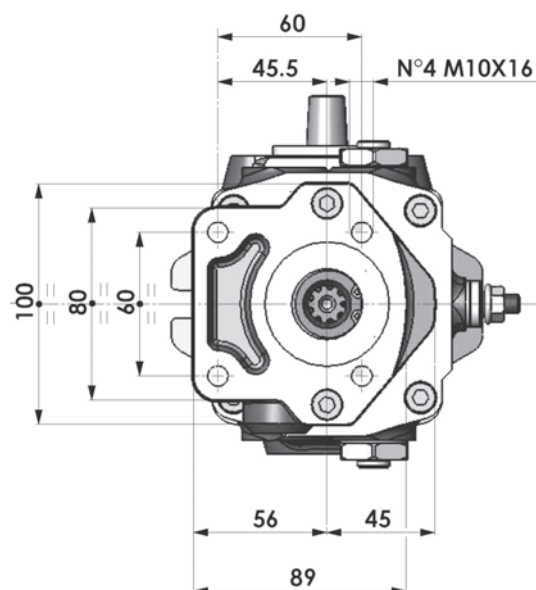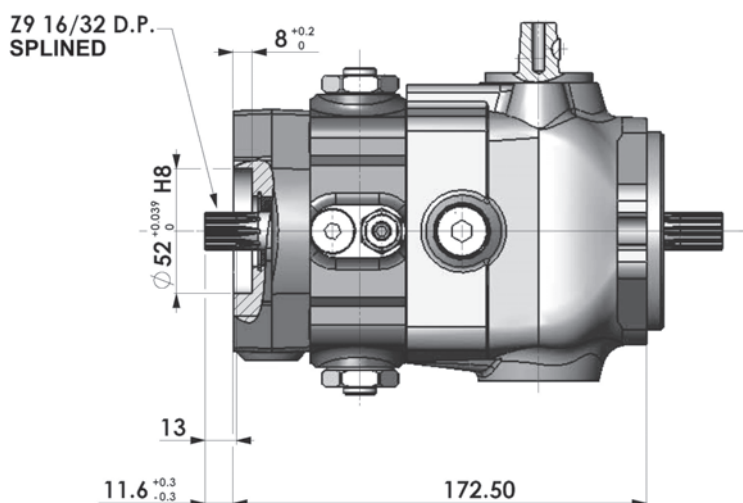

Rear Pump Flange Connections (Pump with Hydraulic Remote Control)


B1 - German Standard

Max. torque = 48 Nm

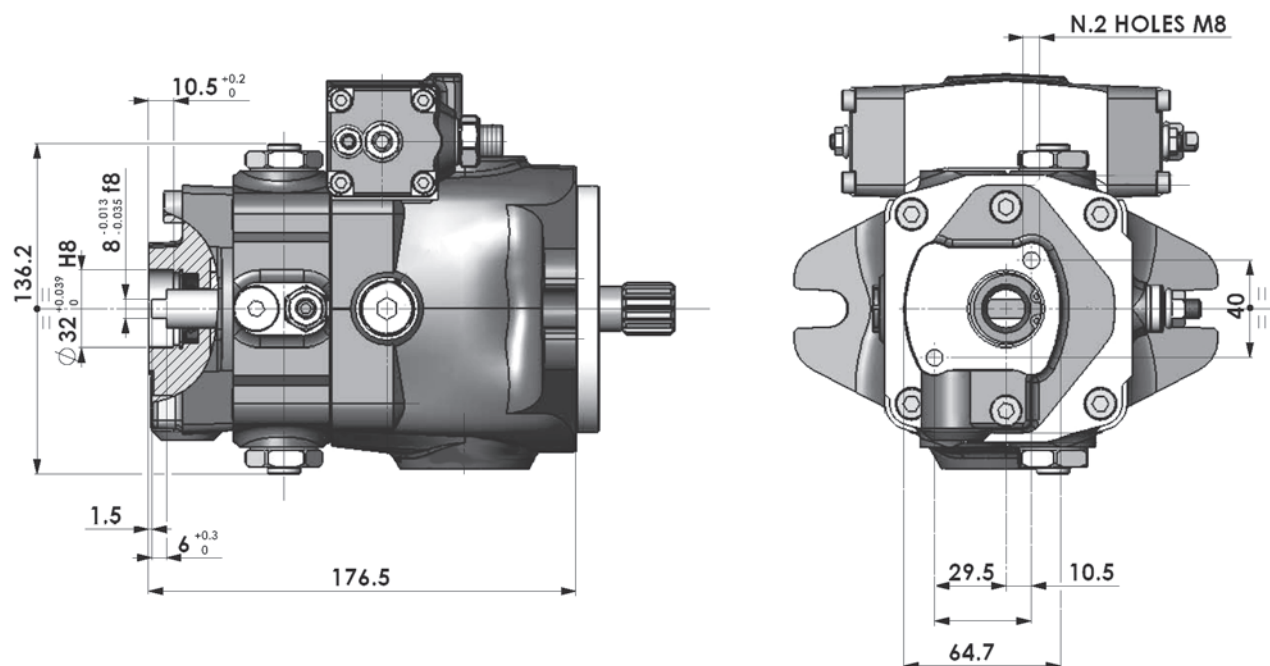

B2 - German Standard


Max. torque = 52 Nm

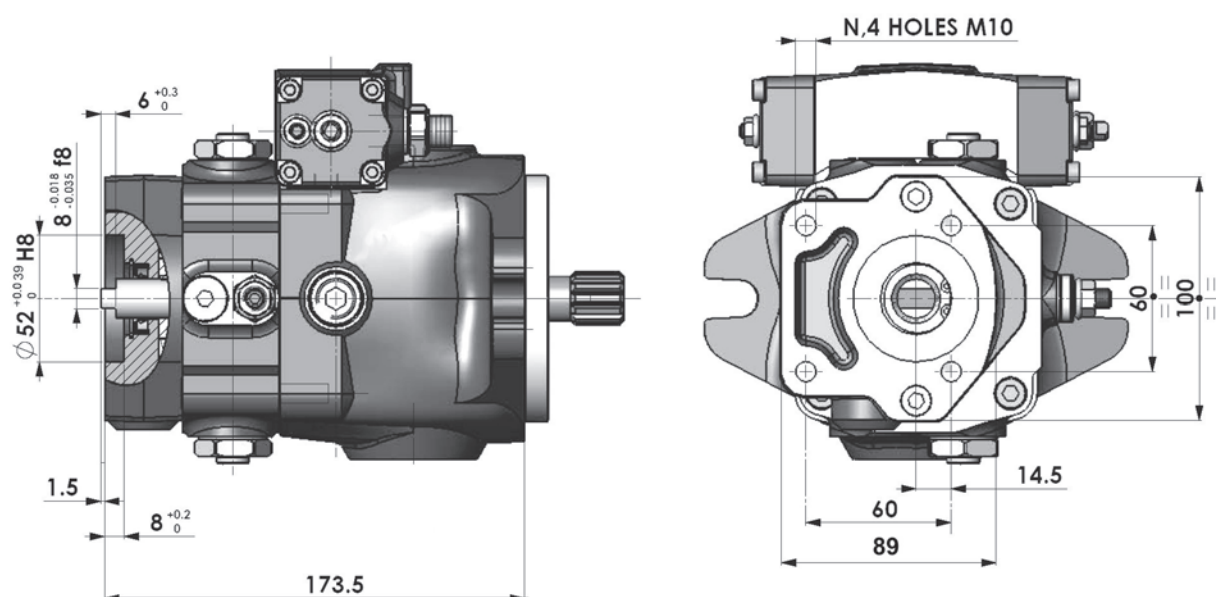

Rear Pump Flange Connections (Pump with Hydraulic Remote Control)



SAE A - R - 2 holes

Max. torque = 60 Nm

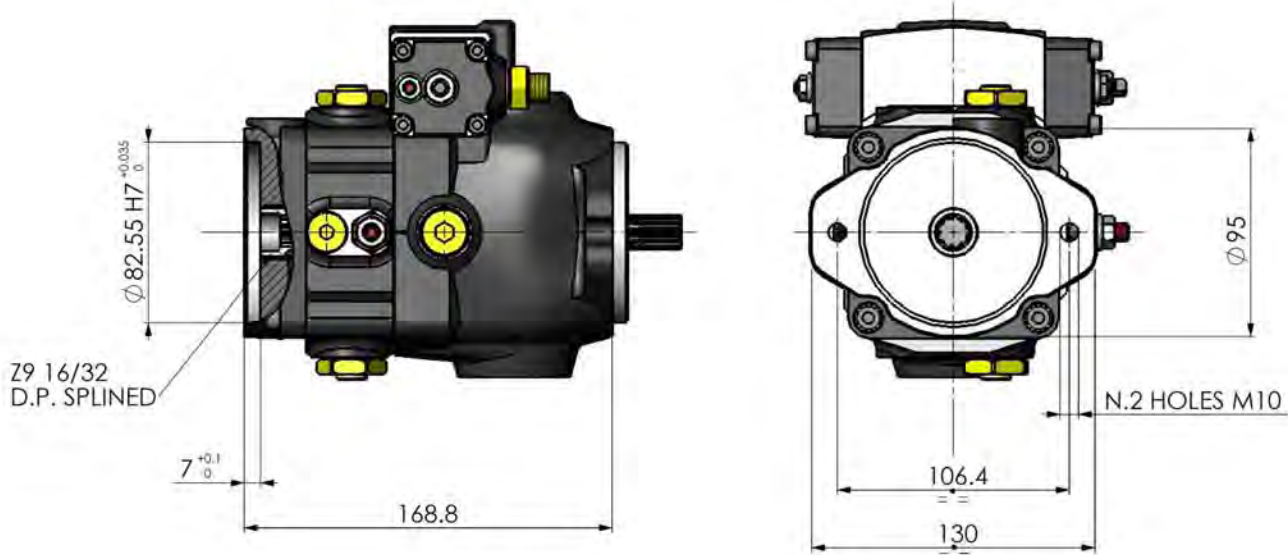


CONTROL DEVICES

Direct Mechanical without Control Lever **DM**

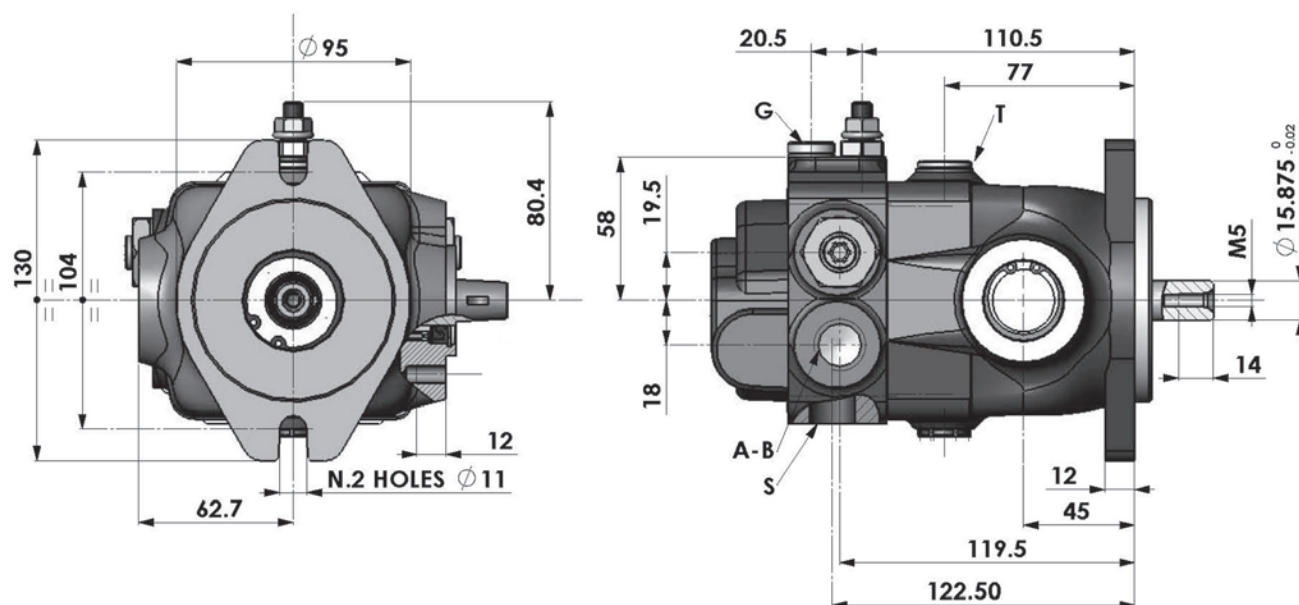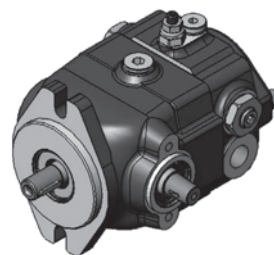

Tapered Bush **BC**



Tapered bush with woodruff key, external cylindric. Suitable for arrangement of specific control levers.

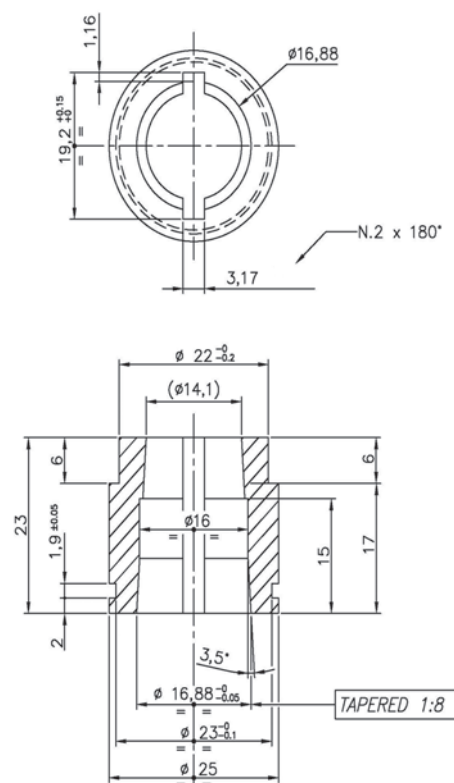

CONTROL DEVICES

Direct Mechanical Control Lever **LC**

The pump displacement variation is obtained by rotate the lever shaft in a clockwise or counter-clockwise direction. The lever shaft is directly linked to the pump swashplate by means of a tapered mounting, this reduce the noise due to vibrations.

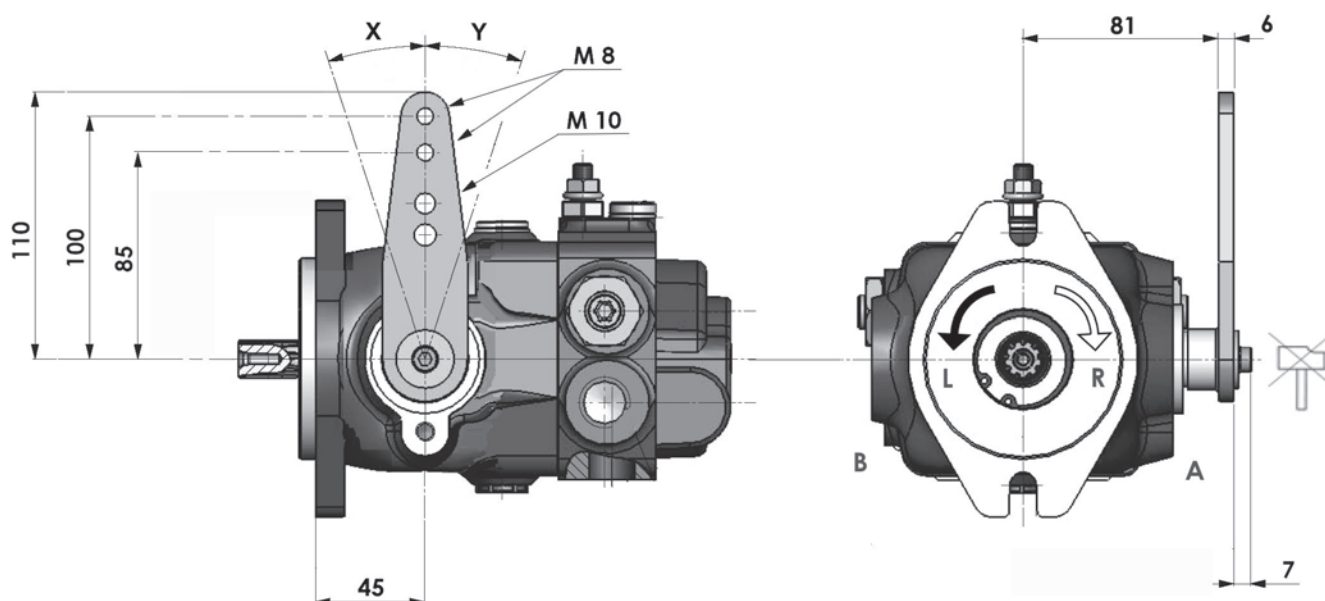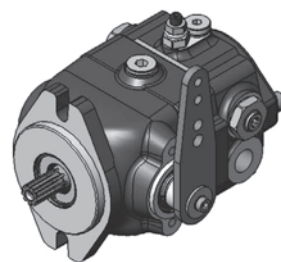


Lever Angle										
Pump Model	6 / 7	8 / 7	9 / 7	11 / 7	12 / 7	13 / 7	15 / 9	17 / 9	18 / 9	19 / 9
Lever Angle (X - Y)	10°	12°	13°	15°	17°	18°	15°	17°	18°	19°

Flow Directional			
Pump Rotation	Lever Position	Flow Out	Flow In
Clockwise R	X Y	A B	B A
C. Clockwise L	X Y	B A	A B

CONTROL DEVICES


Control Lever with return to zero position **DMS**

The pump displacement variation is obtained by rotate the lever shaft in a clockwise or counter-clockwise direction (for angle and flow direction please see page 21). Return to zero is obtained trough a spring integrated in the lever shaft. The lever shaft is directly linked to the pump swashplate by means of tapered mounting, this reduce the noise due to vibrations.

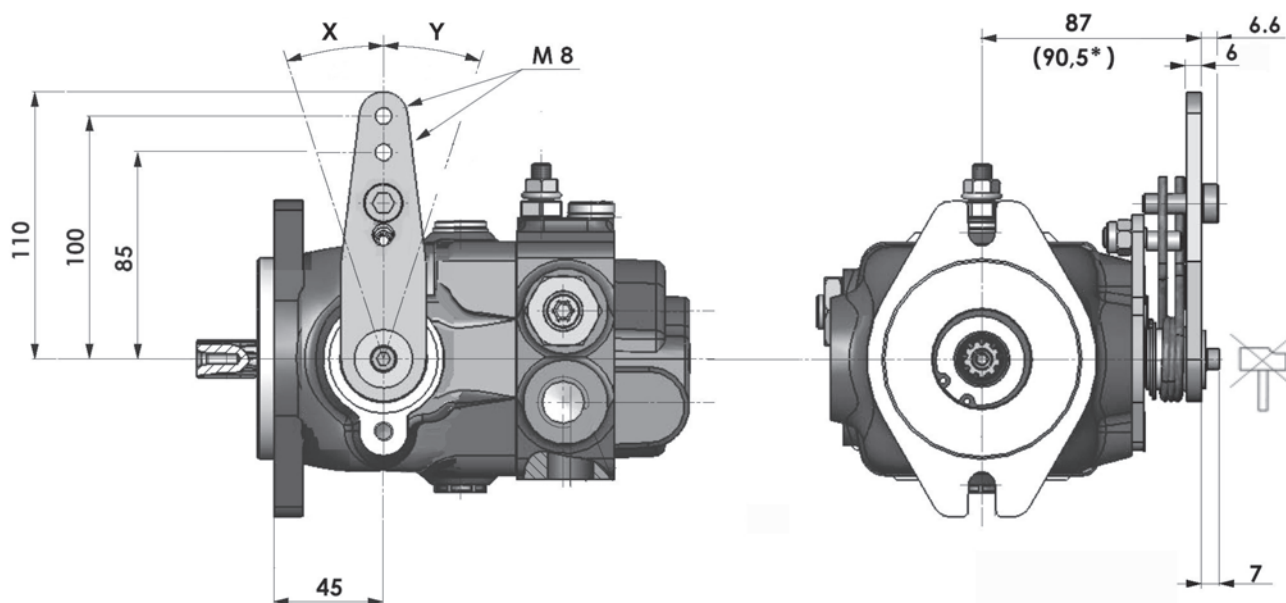


Standard Spring Diameter: **3,6 mm**
Spring Diameter Available: **3,3 - 4 - 5 mm**

Lever force - 100 bar

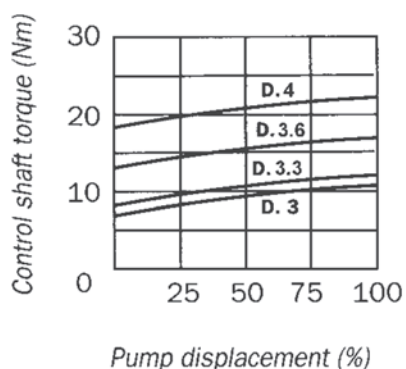



Lever force - 200 bar

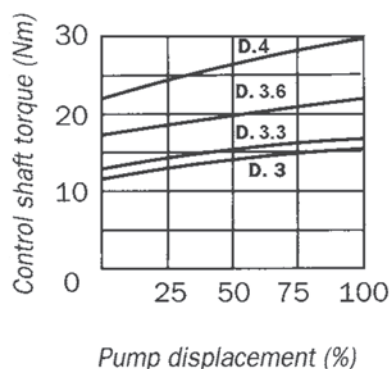

CONTROL DEVICES



Control Lever with detent in zero position **LCS1**

The pump displacement variation is obtained by rotate the lever shaft in a clockwise or counter-clockwise direction (for angle and flow direction see previous page). A mechanical detent in zero displacement position is incorporated in the lever shaft. The lever shaft is directly linked to the pump swashplate by means of tapered mounting, this reduce the noise due to vibrations.

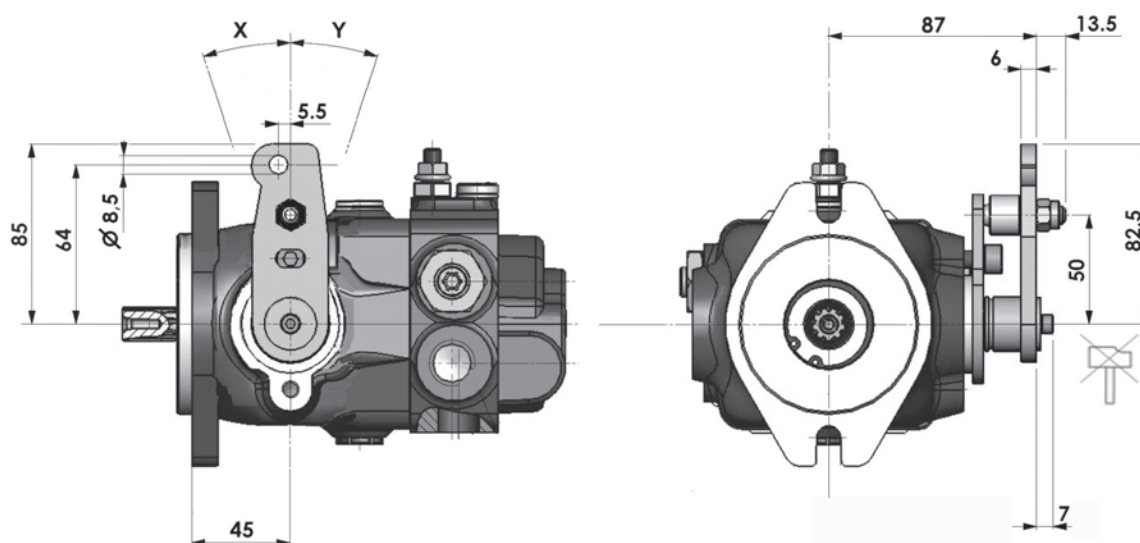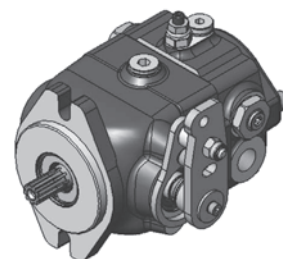


Hand wheel control **LCS2**

The pump displacement variation is obtained by rotate the hand-wheel in a clockwise or counter clockwise direction.

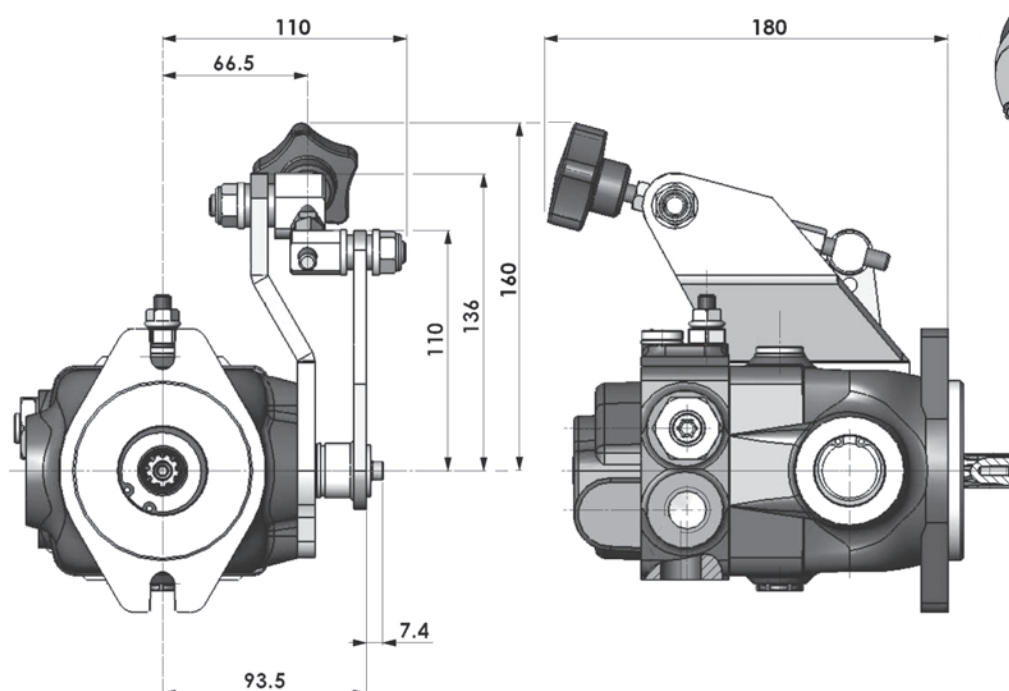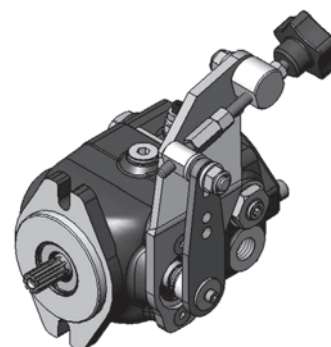


CONTROL DEVICE POSITION - Primary and Secondary Pump


OA

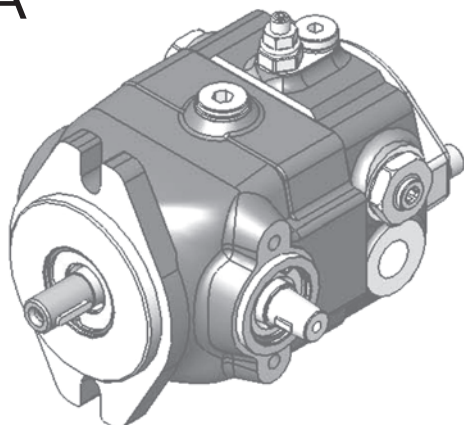


OB

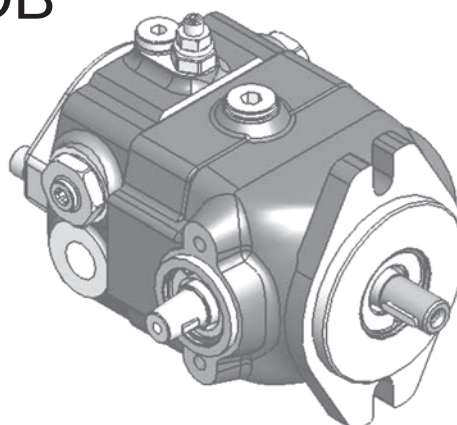


LA

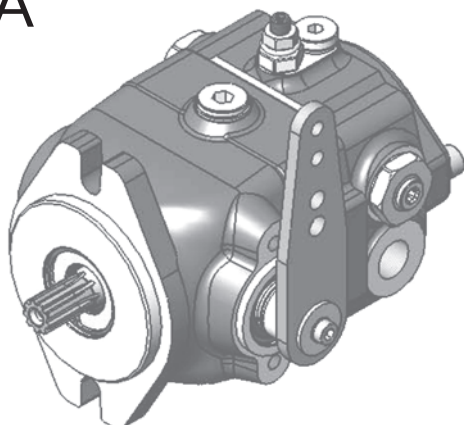


LB

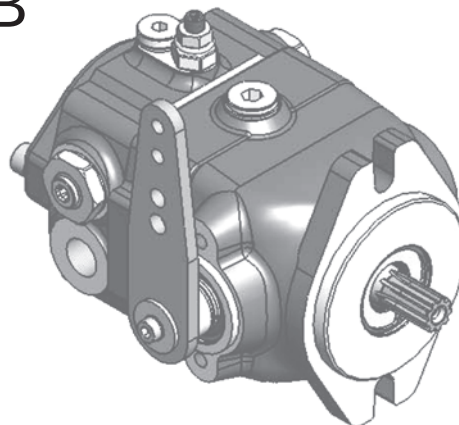

RA

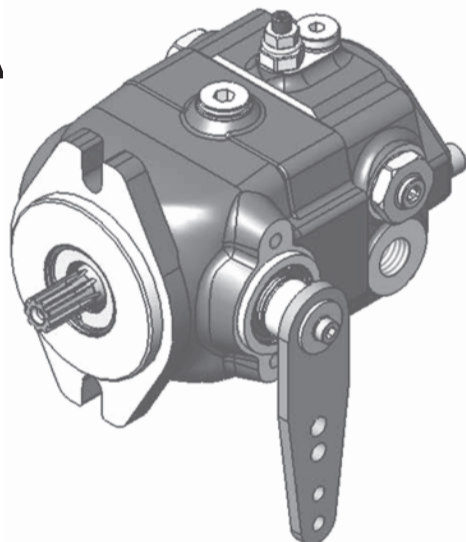

RB

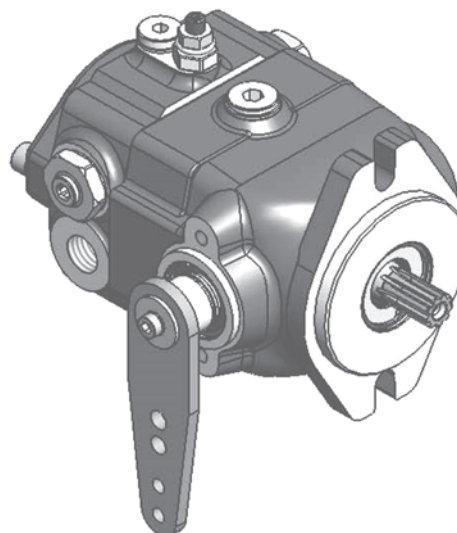

CONTROL DEVICES

Hydraulic Remote Servo-Control SHI




The displacement pump variation is obtained by adjusting the pressure on the P1 and P2 servo-control connections by means of a hydraulic proportional joystick (containing pressure reducing valves).

The servo-control supply can be obtained by taking pressure from the charge pump (G connection).

The servo-control return time can be adjusted by inserting a restrictor on the joystick supply line.

The servo-control operation curve in both control directions goes from 2 to 12 bar (tolerance $\pm 5\%$).

The adjustment curve of the hydraulic joystick has to be (2 - 12 bar) plus with final step.

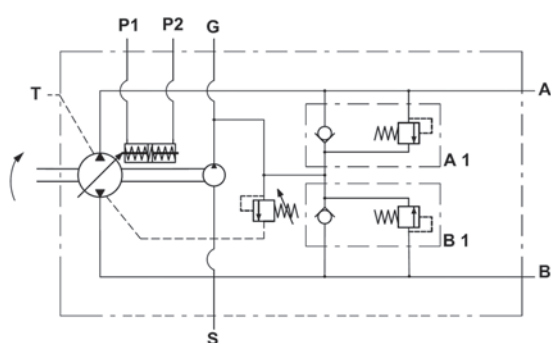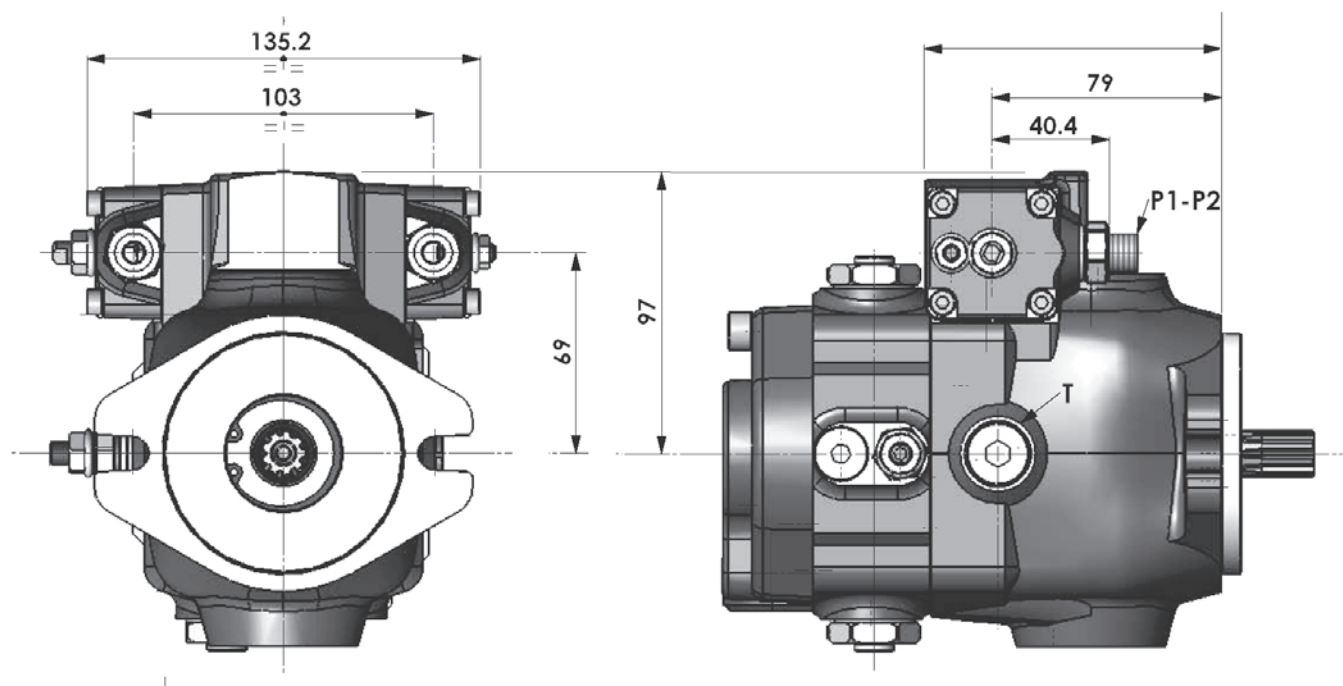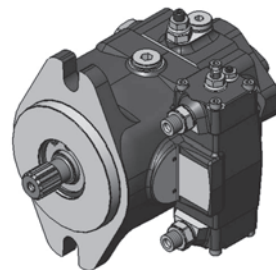



Hydraulic Diagram

Pipe connection		
A - B	Main ports	1/2" BSP
T	Drain	3/8" BSP
S	Suction	1/2" BSP
G	Charge system	1/4" BSP
P1 - P2	Servo-control ports	1/4" BSP

CONTROL DEVICES

Electric Remote Servo-Control SEI
SEI1.1 (12V DC)
SEI2.1 (24V DC)

The pump displacement variation is obtained by an electric signal, which varies from 0 to 750 mA (supply voltage 24V DC) or from 0 to 1500 mA (supply voltage 12V DC).

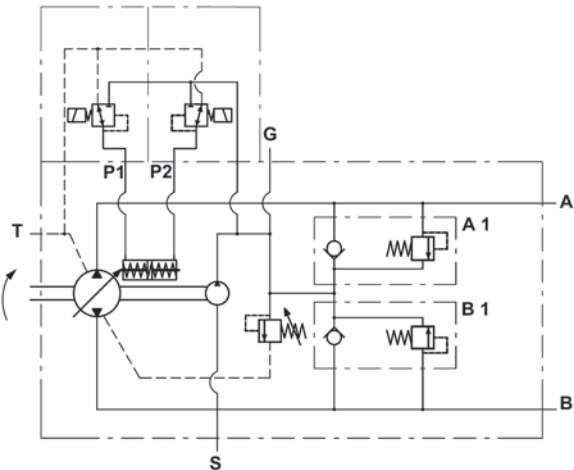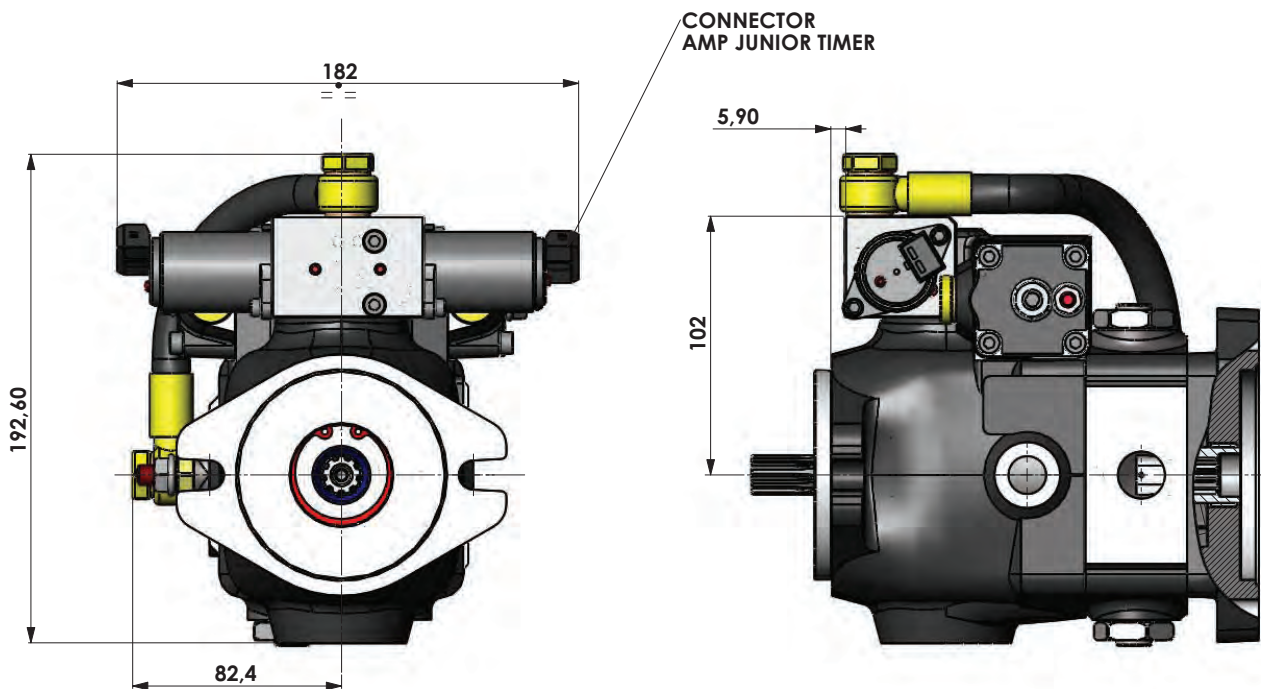

Hydraulic Diagram




SPECIFICATIONS	
Max. pressure	35 bar
Sealing	NBR
Available voltage	12 - 24V DC
Coil resistance	12V 5,0 ± 6% Ω 24V 19,6 ± 6% Ω
Max. current 12V DC	1500 mA
Max. current 24V DC	750 mA
Hysteresis	< 0,5 bar
PWM	100 Hz
Protection index with connector	IP 65

Electric Characteristics

OPTIONAL

Lever By-pass LB

Hand drive valve to join the A and B ports to allow the free-wheeling of the motor.
(Available also Screw by-pass).

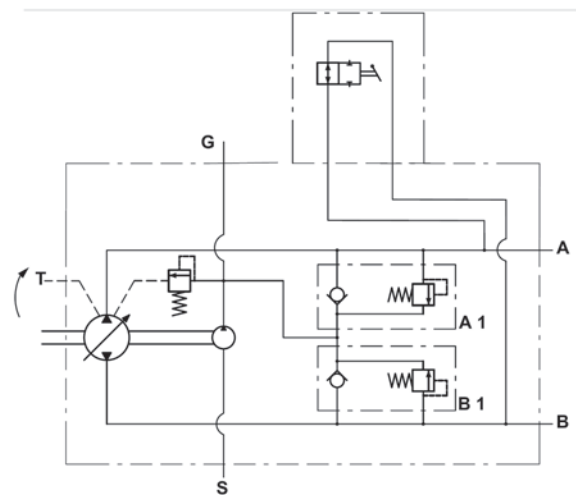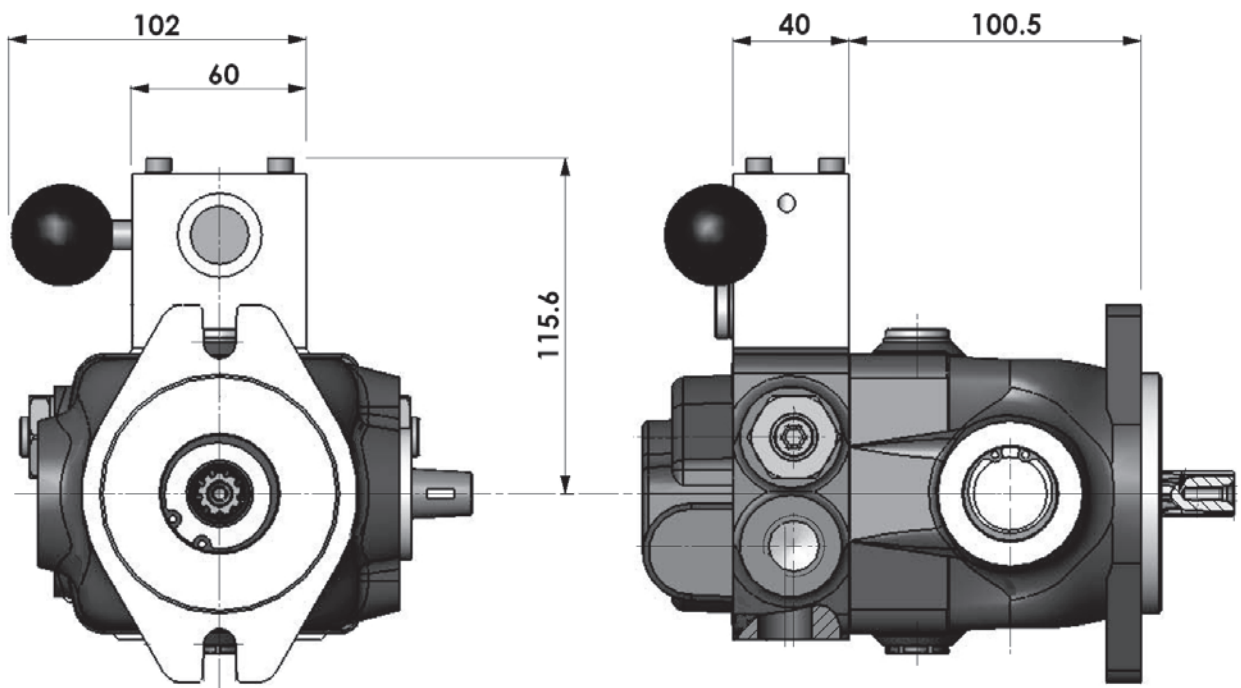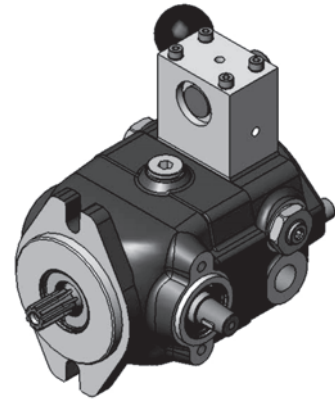





Hydraulic Diagram

OPTIONAL

Purge Valve VS

Subtracting warm oil from the closed circuit, the purge valve allows the flow of cool fluid from the charge system.

Oil flow for cooling = 1 lt/min. at 1500 n/min.

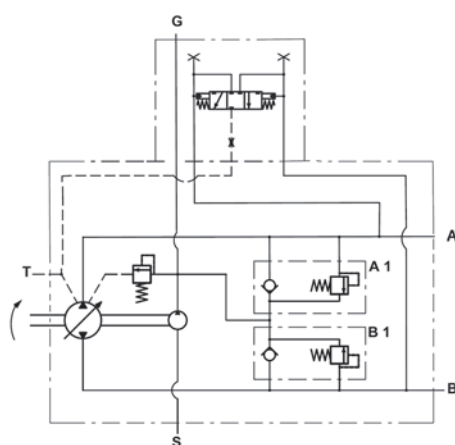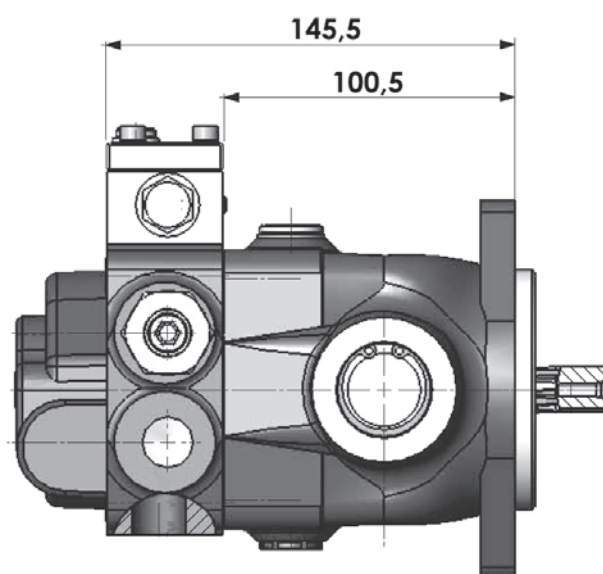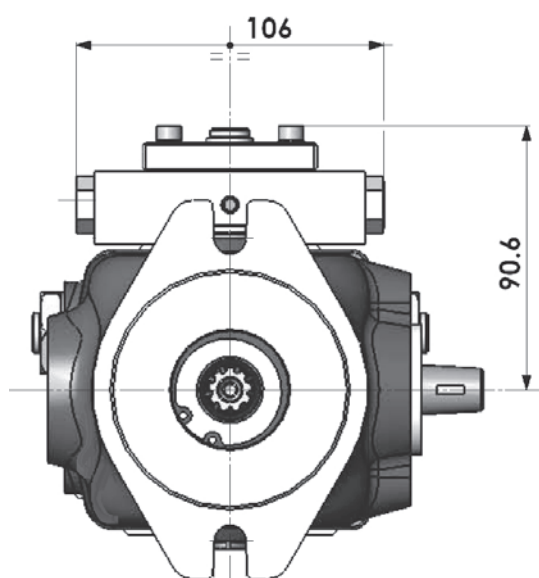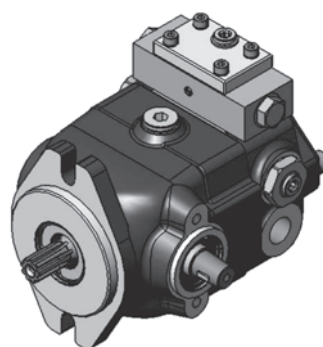




Hydraulic Diagram

OPTIONAL

Purge Valve + Lever By-pass VSLB

The Hand drive valve join the A and B ports to allow the free-wheeling of the motor.

The purge valve, subtracting warm oil from the closed circuit, allows the flow of cool fluid from the charge system.
Oil flow for cooling = 1 lt/min. at 1500 n/min.

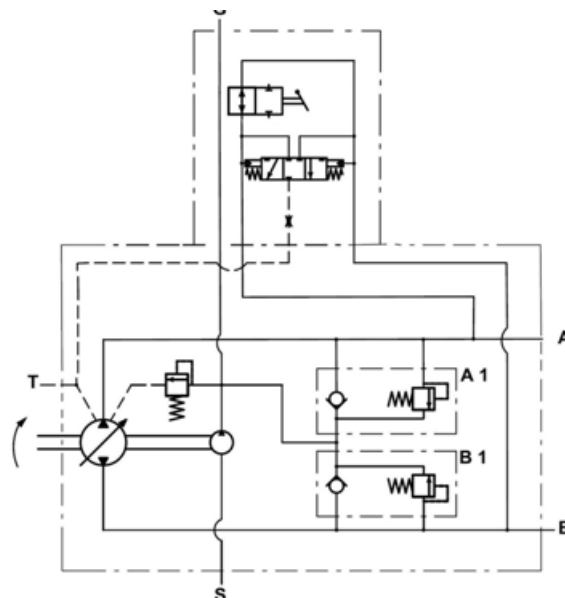
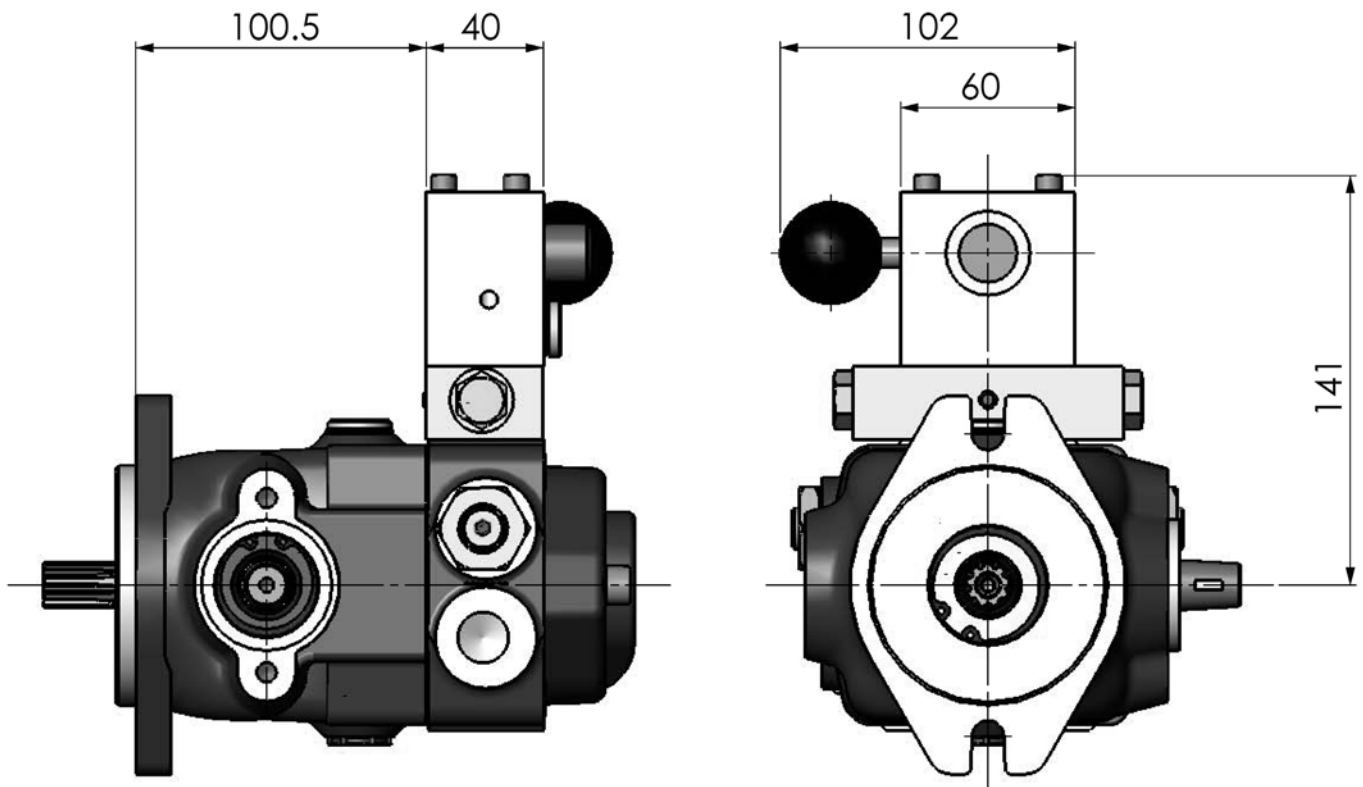
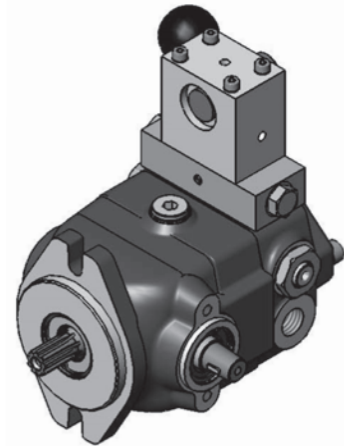


Hydraulic Diagram

OPTIONAL

Electric By-pass **BEO** (normally open)
 BEC (normally closed)

Electric drive valve to join the A and B ports
to allow the free-wheeling of the motor.

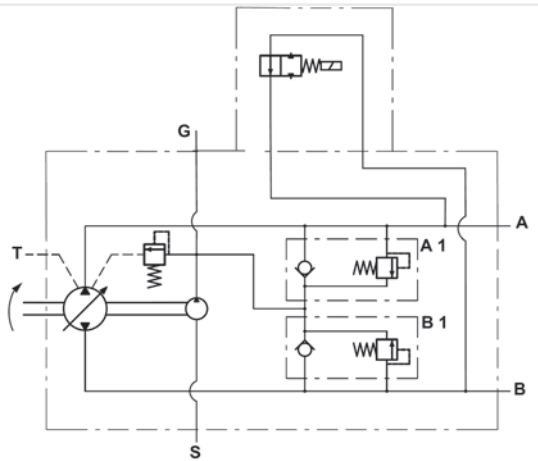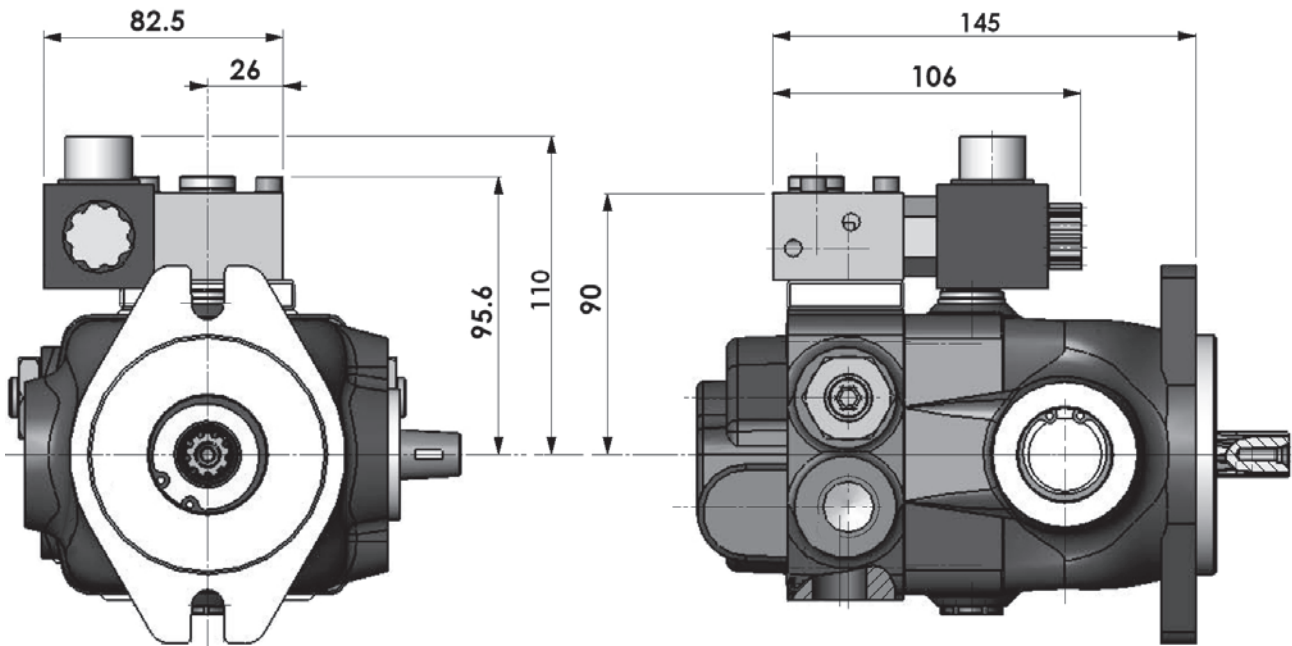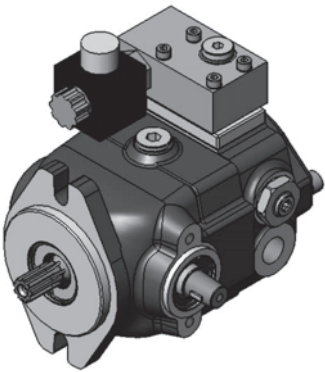

Hydraulic Diagram

SPECIFICATIONS	
Max. pressure	350 bar
Sealing	NBR
Available voltage	12 - 24 V DC
Coil resistance	12V: 7,4 Ω 24V: 28,5 Ω
Max. current 12 VDC	Cold coil 1,62 A - Warm coil 1,10 A
Max. current 24 VDC	Cold coil 0,85 A - Warm coil 0,61 A
Max. Power	Cold coil 12V: 20 W 24V: 20 W
Protection index with connector	IP 65

Electric Characteristics

AVAILABLE CONFIGURATIONS

14	SHI CONTROL DEVICES					
	Hydraulic control zero spiring		Servo control fittings		Flow restrictor	
STANDARD	R		G		-	
ON REQUEST	R	RED (STANDARD) (High load)	G	1/4" BSP	-	No restrictor
	B	BLU (Low load)	J	9/16 JIC	5 ÷ X	0.5 ÷ X Diameter restrictor
			M	M12x1.5 metric		

TPV 1000: PUMP DISTRIBUTION PLATE AVAILABLE CONFIGURATIONS		1 - PUMP SERIES: TPVT - TPVT3		1 - PUMP SERIES: TPV							
		6 - MOUNTING FLANGE: F1 7 - CONTROL: DM - BC - LC - LCS1 - LCS2 - DMS									
		11 - CHARGE PUMP: 00 - 06 - 06(xx)						11 - CHARGE PUMP: 00/1			
12 - REAR PUMP CONNECTIONS		TPVT	TPVT3	C	B1	B2	B1-Z9	B2-Z9	SA-R	B1	B2
5 - SHAFT	SS2	X		X	X	X	X	X	X	X	X
	PS1			X	X	X					
	PS3	X		X	X	X			X	X	X
		6 - MOUNTING FLANGE: F2 7 - CONTROL: DM - BC - LC - LCS1 - LCS2 - DMS									
		11 - CHARGE PUMP: 00 - 06 - 06(xx)						11 - CHARGE PUMP: 00/1			
		TPVT	TPVT3	C	B1	B2	B1-Z9	B2-Z9	SA-R	B1	B2
	SS3	X		X	X	X			X		
		6 - MOUNTING FLANGE: F1 7 - CONTROL: SHI - SEI1 - SEI2 - SEIP									
		11 - CHARGE PUMP: 00 - 06 - 06(xx)						11 - CHARGE PUMP: 00/1			
				C	B1	B2	B1-Z9	B2-Z9	SA-R	B1	B2
12 - REAR PUMP CONNECTIONS		TPVT	TPVT3	C	B1	B2	B1-Z9	B2-Z9	SA-R	B1	B2
5 - SHAFT	SS2	X		X	X	X	X	X	X	X	X
	PS1			X	X	X					
	PS3	X		X	X	X			X	X	X
		6 - MOUNTING FLANGE: F2 7 - CONTROL: SHI - SEI1 - SEI2 - SEIP									
		11 - CHARGE PUMP: 00 - 06 - 06(xx)						11 - CHARGE PUMP: 00/1			
		TPVT	TPVT3	C	B1	B2	B1-Z9	B2-Z9	SA-R	B1	B2
	SS3	X		X	X	X			X		

TPV 1000: PUMP BODY & SHAFT AVAILABLE CONFIGURATIONS		1 - PUMP SERIES: TPV - TPVT - TPVT3			
		6 - MOUNTING FLANGE: F1			
		7 - CONTROL: DM - BC - LC - LCS1 - LCS2 - DMS - DMS(xx)			
12 - REAR PUMP CONNECTIONS		7 - CONTROL: SHI - SEI1 - SEI2 - SEIP			
14 - OPTIONAL		TUTTI ECCETTO "PR"	PR	SHI	SEI1 - SEI2 - SEIP
5 - SHAFT	SS2	X	X	X	X
	PS1	X	X	X	X
	PS3	X			
	6 - MOUNTING FLANGE: F2				
	SS3			X	X

TPV 1000: PUMP DISTRIBUTION PLATE AVAILABLE CONFIGURATIONS		1 - PUMP SERIES: TPVT - TPVT3		1 - PUMP SERIES: TPV				
				ALL EXCEPT "SA"		11-REAR PUMP CONNECTION: SA		
				11 - CHARGE PUMP: 00 - 06 - 06(xx)	11 - CHARGE PUMP: 00/1	11 - CHARGE PUMP: 06 - 06(xx)	11 - CHARGE PUMP: 00	11 - CHARGE PUMP: 00/1
14 - OPTIONALS		2 - DISPLACEMENT	TPVT	TPVT3				
5 - SHAFT	00, SP, FB, ST, PR, VTS, RG-	06-08-09-11-12-13/7	X		X	X	X	
		15-17-18/9	X		X	X	X	
	VS	06-08-09-11-12-13/7	X		X	X		
		15-17-18/9	X		X			
	LB	06-08-09-11-12-13/7	X		X			
		15-17-18/9	X		X			
	SB	06-08-09-11-12-13/7			X	X		
		15-17-18/9				X		
	BEO	06-08-09-11-12-13/7	X		X	X		
		15-17-18/9	X		X			
	BEC	06-08-09-11-12-13/7	X		X	X		
		15-17-18/9	X		X			

ORDER CODE

1000	TPV	6-7	-	CR	SS2	F1	DM	OA	-	10	06	B1	000	00
0	1	2	3	4	5	6	7	8	9	10	11	12	13	14

Pag.

0 - Pump series

1000 = TPV pump 1000

1 - Pump model

TPV = Closed loop circuit single pump

TPV-T = Closed loop circuit tandem pump

TPV-T3 = Closed loop circuit triple pump

TPVS* = Closed loop circuit special pump upon customer request

8-9

10

12

2 - Pump displacement (primary)

6

6-7 = 7,4 cm³/n 8-7 = 8,9 cm³/n 9-7 = 9,6 cm³/n 11-7 = 11,2 cm³/n 12-7 = 12,8 cm³/n
 13-7 = 13,6 cm³/n 15-9 = 15 cm³/n 17-9 = 17,1 cm³/n 18-9 = 18,2 cm³/n 19-9 = 19,4 cm³/n

3 - Tandem pump displacement (secondary)

6

6-7 = 7,4 cm³/n 8-7 = 8,9 cm³/n 9-7 = 9,6 cm³/n 11-7 = 11,2 cm³/n 12-7 = 12,8 cm³/n
 13-7 = 13,6 cm³/n 15-9 = 15 cm³/n 17-9 = 17,1 cm³/n 18-9 = 18,2 cm³/n 19-9 = 19,4 cm³/n

4 - Rotation

CR = Clockwise Rotation (right)

CC = Counter-clockwise Rotation (left)

5 - Shaft (mounting side)

15

SS2 = Splined shaft Z 9 - 16 / 32 D.P.

PS1 = Parallel keyed shaft 15,875 mm diam.

PS3 = Parallel keyed shaft 18 mm diam. with increased bearing for external radial load

SS3 = Splined shaft Z 13 - 16 / 32 D.P. (only available with remote hydraulic servo-control with SAE B flange)

6 - Mounting flange

14

F1 = SAE A 2 holes - pilot diam. 82,5 mm.

F2 = SAE B 2 holes - pilot diam. 101,6 mm. (only available with remote hydraulic servo-control SHI and shaft SS3)

7 - Controls

DM = Direct mechanical (without control lever)

BC = Tapered bush

LC = Control lever

LCS1 = Control lever with detent in zero position

LCS2 = Control lever with hand wheel

DMS = Control lever with return spring (standard spring diameter 3,6 mm)

DMS(30) = Control lever with return spring (spring diameter 3 mm)

DMS(33) = Control lever with return spring (spring diameter 3,3 mm)

DMS(40) = Control lever with return spring (spring diameter 4 mm)

DMS(50) = Control lever with return spring (spring diameter 5 mm)

SHI = Integrated Hydraulic remote servo control

SEI1.1 = Integrated Electric remote servo control 12 V DC

SEI2.1 = Integrated Electric remote servo control 24 V DC

8 - Control devices position primary pump

24

OA = Position A (without lever)

OB = Position B (without lever)

LA = Position A-left

RA = Position A-right

LB = Position B-left

RB = Position B-right

ORDER CODE (continued)

Pag.

9 - Control devices position secondary pump

24

- OA** = Position A (without lever)
OB = Position B (without lever)
LA = Position A-left
RA = Position A-right
LB = Position B-left
RB = Position B-right

10 - Relief valve pressure setting *

- | | | |
|---------------------|---------------------|---------------------|
| 10 = 100 bar | 15 = 150 bar | 18 = 180 bar |
| 20 = 200 bar | 25 = 250 bar | 30 = 300 bar |

* The rated pressure value are changing with different speed.

11 - Charge pump

- 00** = Without charge pump
01 = Without charge pump compact version (only for rear pump flange B1 - B2)
06 = Standard pump C-B1-B2 (3,9 cm³/n) SAE A (4,7 cm³/n)
06(xx) = Other pressure settings on request (between 8 and 30 bar), contact our technical department

12 - Rear pump connection option

- | | |
|---|----|
| C = Closed cover (without rear fitting) | |
| B1 = German standard pump group 1 mounting | 16 |
| B2 = German standard pump group 2 mounting | 17 |
| B1Z9 = Flange as German standard pump group 1 mounting with 9 teeth male shaft | 16 |
| B2Z9 = Flange as German standard pump group 2 mounting with 9 teeth male shaft | 17 |
| SA = SAE A - 2 holes mounting flange (female shaft) | 19 |

13 - Gear pump displacement

- 000** = Without pump

- | | | | | |
|----------------|--------------------------------------|--------------------------------------|--------------------------------------|--------------------------------------|
| Group 1 | 112 = 1,2 cm ³ /n | 117 = 1,7 cm ³ /n | 122 = 2,1 cm ³ /n | 126 = 2,6 cm ³ /n |
| | 132 = 3,1 cm ³ /n | 138 = 3,6 cm ³ /n | 143 = 4,2 cm ³ /n | 149 = 4,9 cm ³ /n |
| | 159 = 5,9 cm ³ /n | 165 = 6,5 cm ³ /n | 178 = 7,5 cm ³ /n | |
| Group 2 | 204 = 4,2 cm ³ /n | 206 = 6,0 cm ³ /n | 209 = 8,4 cm ³ /n | 211 = 10,8 cm ³ /n |
| | 214 = 14,4 cm ³ /n | 217 = 16,8 cm ³ /n | 219 = 19,2 cm ³ /n | 222 = 22,8 cm ³ /n |
| | 226 = 26,2 cm ³ /n | | | |

14 - Optional

- | | |
|--|----|
| 00 = Without optional | |
| LB = Lever by-pass | 27 |
| VS = Purge valve | 28 |
| VSBE0 = Electric by-pass + Purge valve | |
| VSLB = Lever by-pass + Purge Valve | 29 |
| SB = Screw by-pass (compact version only) | |
| BEO = Electric by-pass normally open (12V DC only) | 30 |
| BEC = Electric by-pass normally closed (12V DC only) | 30 |
| SP = Multiple pump support | |
| FB = Conversion flange from SAE A to SAE B | 14 |
| ST = Conversion shaft 9 teeth to 13 teeth | 14 |
| FBST = Conversion flange from SAE A to SAE B + Conversion shaft 9 teeth to 13 teeth | 14 |
| PR = Full resistant swash plate bearing | |
| RG = Servo control special devices (please see table 14 at page 31) | |

ACCESSORIES

Hydraulic Gear Pump German Standard **B1**

Hydraulic Gear Pump German Standard **B2**



For more detailed information ask for catalogue HT 15 F.....

Hydraulic Remote Servo Controls



For more detailed information ask for catalogue HT 73 B.....

Electric Remote Servo Controls





For more detailed information ask for catalogue HT 150 A.....

Flanges and Couplings for Gasoline and Diesel engines

GASOLINE OR DIESEL ENGINES

FLANGES AND COUPLINGS

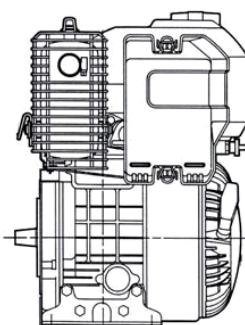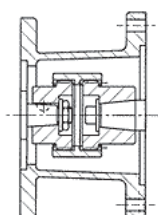

For more detailed information ask for specific catalogue

As HANSA-TMP has a very extensive range of products and some products have a variety of applications, the information supplied may often only apply to specific situations.

If the catalogue does not supply all the information required, please contact HANSA-TMP.

In order to provide a comprehensive reply to queries we may require specific data regarding the proposed application.

Whilst every reasonable endeavour has been made to ensure accuracy, this publication cannot be considered to represent part of any contract, whether expressed or implied.

HANSA-TMP reserves the right to amend specifications at their discretion.



**HYDRAULIC COMPONENTS
HYDROSTATIC TRANSMISSIONS
GEARBOXES - ACCESSORIES**

Via M. L. King, 6 - **41122 MODENA (ITALY)**

Tel: +39 059 415 711

Fax: +39 059 415 729 / 059 415 730

INTERNET: <http://www.hansatmp.it>

E-MAIL: hansatmp@hansatmp.it